

# SONY®

4-467-209-12(1)

## Blu-ray Disc™ / DVD Player

### Operating Instructions

---

Hookups and Settings

---

Playback

---

Settings and Adjustments

---

Additional Information



BDP-A6000

# WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to dripping or splashing, and do not place objects filled with liquids, such as vases, on the appliance.

To reduce the risk of fire, do not cover the ventilation opening of the appliance with newspapers, tablecloths, curtains, etc. Do not expose the appliance to naked flame sources (for example, lighted candles).


To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The mains lead must be changed only at a qualified service shop.

Do not expose batteries or appliances with battery-installed to excessive heat, such as sunshine and fire.

## CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this Blu-ray Disc/DVD player is harmful to eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

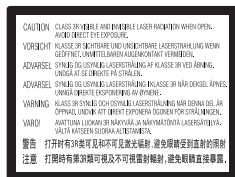


 
This label is located on the laser protective housing inside the enclosure.



This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

A molded plug complying with BS1363 is fitted

to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a fuse of the same rating as the supplied one and approved by ASTA or BSI to BS1362, (i.e., marked with  or  mark) must be used. If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.



**Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)**

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.



**Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)**

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.

On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent potentially

negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only.

To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

**Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives.**

This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents.



Hereby, Sony Corp., declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. For details, please access the following URL: <http://www.compliance.sony.de/>

**Precautions**

- This unit operates on 220–240V AC, 50/60 Hz. Check that the unit's operating voltage is identical with your local power supply.

- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Install this unit so that the power cord can be unplugged from the wall socket immediately in the event of trouble.

---

## Precautions

This equipment has been tested and found to comply with the limits set out in the EMC Directive using a connection cable shorter than 3 metres.

### On placement

- Place the player in a location with adequate ventilation to prevent heat build-up in the player.
- Do not place the player on a soft surface such as a rug that might block the ventilation holes.
- Do not install this player in a confined space, such as a bookshelf or similar unit.
- Do not place the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- Do not place the player outdoors, in vehicles, on ships, or on other vessels.
- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.
- Do not install the player in an inclined position. It is designed to be operated in a horizontal position only.
- Do not place metal objects in front of the front panel. It may limit reception of radio waves.
- Do not place the player in a place where medical equipment is in use. It may cause a malfunction of medical instruments.
- If you use a pacemaker or other medical device, consult your physician or the manufacturer of your medical device before using the wireless LAN function.
- This player should be installed and operated with a minimum distance of at least 20 cm or more between the player and a person's body (excluding extremities: hands, wrists, feet and ankles).

- Do not place heavy or unstable objects on the player.
- Do not place any objects other than discs on the disc tray. Doing so may cause damage to the player or the object.
- Take out any discs when you move the player. If you don't, the disc may be damaged.
- Disconnect the AC power cord (mains lead) and all other cables from the player when you move the player.

### On power sources

- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- Disconnect the player from the wall outlet if you are not going to use the player for a long time. To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.
- Observe following points to prevent the AC power cord (mains lead) being damaged. Do not use the AC power cord (mains lead) if it is damaged, as doing so may result in an electric shock or fire.
  - Do not pinch the AC power cord (mains lead) between the player and wall, shelf, etc.
  - Do not put anything heavy on the AC power cord (mains lead) or pull on the AC power cord (mains lead) itself.

### On adjusting volume

Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, your ears and the speakers may be damaged when a peak level section is played.

### On cleaning

Clean the cabinet, panel, and controls with a soft cloth. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

## On cleaning discs, disc/lens cleaners

Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction.


## On replacement of parts

In the events that this player is repaired, repaired parts may be collected for reuse or recycling purposes.

## On connecting to the HDMI OUT jack

Observe the following as improper handling may damage the HDMI OUT jack and the connector.

- Carefully align the HDMI OUT jack on the rear of the player and the HDMI connector by checking their shapes. Make sure the connector is not upside down or tilted.

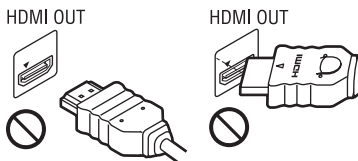

- Be sure to disconnect the HDMI cable when moving the player.



- Hold the HDMI connector straight when connecting or disconnecting the HDMI cable. Do not twist or force the HDMI connector into the HDMI OUT jack.

## On watching 3D video images

Some people may experience discomfort (such as eye strain, fatigue, or nausea) while watching 3D video images. Sony recommends that all viewers take regular breaks while watching 3D video images. The length and frequency of necessary breaks will vary from person to person. You must decide what works best. If you experience any discomfort, you should stop watching the 3D video images until the discomfort ends; consult a doctor if

you believe necessary. You should also review (i) the instruction manual and/or the caution message of any other device used with, or Blu-ray Disc contents played with this product and (ii) our website\* for the latest information. The vision of young children (especially those under six years old) is still under development. Consult your doctor (such as a pediatrician or eye doctor) before allowing young children to watch 3D video images.

Adults should supervise young children to ensure they follow the recommendations listed above.

**\* For customers in European countries**

**<http://www.sony-europe.com/myproduct/>**

## IMPORTANT NOTICE

Caution: This player is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Plasma display panel televisions and projection televisions are susceptible to this.

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

## Copy Protection



Please be advised of the advanced content protection systems used in both Blu-ray Disc™ and DVD media. These systems, called AACS (Advanced Access Content System) and CSS (Content Scramble System), may contain some restrictions on playback, analogue output, and other similar features. The operation of this product and the restrictions placed may vary depending on the date of purchase, as the governing board of the AACS may adopt or change its restriction rules after the time of purchase.

## Cinavia Notice

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

## Copyrights and Trademarks

- “AVCHD” and the “AVCHD 3D/Progressive” logo are trademarks of Panasonic Corporation and Sony Corporation.
- Java is a trademark of Oracle and/or its affiliates.
-  “XMB,” and “xross media bar” are trademarks of Sony Corporation and Sony Computer Entertainment Inc.
- This product incorporates High-Definition Multimedia Interface (HDMI™) technology. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- “DVD+RW,” “DVD-RW,” “DVD+R,” “DVD-R,” “DVD VIDEO,” “Super Audio CD,” and “CD” logos are trademarks.
- “Blu-ray Disc,” “Blu-ray,” “Blu-ray 3D,” “BD-LIVE,” “BONUSVIEW,” and logos are trademarks of the Blu-ray Disc Association.
- “x.v.Colour” and “x.v.Colour” logo are trademarks of Sony Corporation.
- “BRAVIA” is a trademark of Sony Corporation.
-  is a trademark of DVD Format/Logo Licensing Corporation.
- “PhotoTV HD” and the “PhotoTV HD” logo are trademarks of Sony Corporation.

- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2010 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.
- Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary. Content owners use Windows Media digital rights management technology (“WMDRM”) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected Content. If the WMDRM software fails to protect the Content, Content owners may ask Microsoft to revoke the Service’s ability to use WMDRM to play or copy protected Content. Revocation does not affect unprotected Content. When you download licenses for protected Content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their Content. If you decline an upgrade, you will not be able to access Content that requires the upgrade.

- Music and video recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information, please visit [www.gracenote.com](http://www.gracenote.com).  
CD, DVD, Blu-ray Disc, and music and

video-related data from Gracenote, Inc., copyright © 2000-present Gracenote. Gracenote Software, copyright © 2000-present Gracenote. One or more patents owned by Gracenote apply to this product and service. See the Gracenote website for a nonexhaustive list of applicable Gracenote patents. Gracenote, CDDb, MusicID, MediaVOCS, the Gracenote logo and logotype, and the "Powered by Gracenote" logo are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries.



- Wi-Fi<sup>®</sup>, Wi-Fi Protected Access<sup>®</sup> and Wi-Fi Alliance<sup>®</sup> are registered marks of the Wi-Fi Alliance.
- Wi-Fi CERTIFIED<sup>™</sup>, WPA<sup>™</sup>, WPA2<sup>™</sup> and Wi-Fi Protected Setup<sup>™</sup> are marks of the Wi-Fi Alliance.
- The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance.
- The Wi-Fi Protected Setup Mark is a mark of the Wi-Fi Alliance.
- All other trademarks are trademarks of their respective owners.
- Other system and product names are generally trademarks or registered trademarks of the manufacturers. <sup>™</sup> and <sup>®</sup> marks are not indicated in this document.

## END USER LICENSE AGREEMENT

Read the following agreement carefully to proceed.

### END USER LICENCE AGREEMENT FOR CERTAIN SOFTWARE AND SERVICE TO BE USED WITH YOUR SONY PRODUCT

This End User Licence Agreement ("EULA") is a legal agreement between you and Sony Corporation ("Sony"), the licensor of the software (other than the software which is governed by other licences as indicated below, the "Excluded Software") included in this Sony Product and related materials which shall be collectively referred to as the "Sony Software." This EULA covers the world-wide market (except for the

United States of America, Canada, China and Japan) as a territory, and also covers the Sony Software and that of Sony's third party licensors ("Third Party Licensors") and accompanying printed or online documentation. The Sony Software includes software in your Sony Product, other software, including updates or modified software, provided to you by Sony, whether stored on media or downloaded to the Sony Product via any method.

## SOFTWARE LICENCE

You cannot use the Sony Software except as specified herein. The Sony Software is licensed, not sold. Sony and its Third Party Licensors grant you a limited licence to use the Sony Software only on the Sony Product. The Sony Software may create data files automatically for use with the Sony Software, and you agree that any such data files are deemed to be a part of the Sony Software. The Sony Software is licensed as a single product, and you may not separate its component parts for use on more than one device unless expressly authorized by Sony. You may not use the Sony Software separately from the Sony Product. Except as such prohibition is restricted by the applicable law, you agree to be prohibited from modifying, reverse engineering, decompiling or disassembling the Sony Software in whole or in part for any purpose other than allowed under this EULA. In addition, you may not rent, lease, sublicense, or sell the Sony Software, but you may transfer all of your rights under this EULA only as part of a sale or transfer of the Sony Product provided you retain no copies, transfer all of the Sony Software (including all copies, component parts, any media, printed materials, all versions and any upgrades of the Sony Software, and this EULA), and the recipient agrees to the terms of this EULA. Sony and its Third Party Licensors retain all rights that this EULA does not expressly grant to you. You shall not (a) bypass, modify, defeat, or circumvent any of the functions or protections of the Sony Software or any mechanisms operatively linked to the Sony Software; or (b) remove, alter, cover, or deface any trademarks or notices on the Sony Software. You understand, acknowledge, and agree that the software, network services, or other products other than the Sony Software upon which the Sony Software's performance may depend might be interrupted or discontinued at the discretion of the suppliers (software suppliers, service providers, Third Party Providers, etc.) or Sony.

## SONY'S RIGHTS TO USER'S MATERIAL

If you send any communications or materials to Sony by electronic mail or otherwise ("Materials"), including any selections, comments, data, questions, suggestions, or the like, all such Materials are, and will be treated as, non-confidential and non-proprietary. Thus, to the maximum extent as permitted under the applicable law, you give up any claim that use of such Materials violates any of your rights including moral rights, privacy rights, proprietary or other property rights, rights of publicity, rights to credit for material or ideas, or any other right, including the right to approve the way Sony uses such Materials. Any Material may be adapted, broadcast, changed, copied, disclosed, licensed, performed, posted, published, sold, transmitted, or used by Sony anywhere in the world, in any medium, for the period in which the above-mentioned rights given up by you exist and without attribution or compensation to you. Furthermore, you hereby assign all right, title, and interest in, and Sony is free to use, without any compensation to you, any ideas, know-how, concepts, techniques, or other intellectual property rights contained in the Materials, whether or not patentable, for any purpose whatsoever, including but not limited to developing, manufacturing, having manufactured, licensing, marketing, and selling products using such Materials. However, you agree and understand that Sony is not obligated to use any such ideas, know-how, concepts, or techniques or Materials, and you have no right to compel such use.

## TRANSMITTED MATERIAL

Internet transmissions are never completely private or secure. You understand that any message or information you send to Sony may be read or intercepted by others, unless there is a special notice that a particular message (for example, credit card information) is encrypted (sent in code). Sending a message to Sony does not cause Sony to have any special responsibility to you.

## OBJECTIONABLE CONTENT AND RULES FOR MINORS

Certain Content may not be suitable for minors or other users. Such Content may or may not be rated or identified as having explicit language, or otherwise being for a mature audience. Therefore, you acknowledge that you are using the Services at your own risk and that Sony has no

liability to you for the Content, including any Content that may be offensive. You are responsible for supervising the use of the Sony Product, the Sony Software, Excluded Software, the Services, and the Content by any minor. If you have no legal competence to execute any agreement with any third party without consent of your parent(s), a guardian or other individuals who have a right to give the consent to you under the applicable law, you should obtain consent before you : (i) e-mail Sony via the Service; (ii) send in any information; (iii) enter any contest or game that requires information about you or offers a prize; (iv) join any club or group; (v) post any information on any bulletin board or enter any chatroom; or (vi) buy anything online.

Some jurisdictions may not allow exclusions or limitations of incidental or consequential damages, exclusions or limitations of implied warranties or conditions, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

## LIMITED WARRANTY ON MEDIA

In situations where the Sony Software or any part thereof is furnished on media, Sony warrants that for a period of ninety (90) days from the date of original purchase by you, the media on which the Sony Software is furnished to you will be free from defects in materials and workmanship under normal use. This limited warranty extends only to you as the original licensee. Sony's entire liability and your exclusive remedy will be replacement of the media not meeting Sony's limited warranty. ANY IMPLIED WARRANTIES OR CONDITIONS ON THE MEDIA, INCLUDING THE IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY, TITLE, NON-INFRINGEMENT, AND/OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO NINETY (90) DAYS FROM THE DATE OF ORIGINAL PURCHASE BY YOU. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY OR CONDITION LASTS, SO THESE LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION.

## INDEMNIFICATION

To the maximum extent as permitted under the



applicable law, you agree to indemnify, defend, and hold harmless Sony and all of its agents, directors, officers, employees, information providers, licensors and licensees, affiliates, content providers, and direct and indirect parent(s) (collectively, "Indemnified Parties") from and against any and all liability and costs (including, without limitation, attorneys' fees and costs) incurred by the Indemnified Parties in connection with any claim arising out of (i) any breach or alleged breach by you of this EULA in any manner, (ii) any information you submit to Sony hereunder, (iii) any breach or alleged breach by you of a third party's rights, (iv) any damage caused by or alleged to have been caused by you to the Sony Software, the Services, or the Content. To the maximum extent as permitted under the applicable law, counsel you select for defense or settlement of a claim must be consented to by Sony and/or Indemnified Party(s) prior to counsel being engaged to represent you and Sony and/or Indemnified Party(s). You and your counsel will cooperate as fully as reasonably required by the Indemnified Party(s) in defense or settlement of any claim. Sony and/or Indemnified Party(s) reserve the right, at its own expense, to assume the exclusive defense or settlement, and control of any matter otherwise subject to indemnification by you. You shall not in any event consent to any judgment, settlement, attachment, or lien, or any other act adverse to the interest of Sony or any Indemnified Party without the prior written consent of Sony and/or Indemnified Party(s).

## **AUTOMATIC UPDATE FEATURE / MODIFICATION OF EULA AS TO SERVICES**

From time to time, Sony or third parties may automatically update or otherwise modify the Sony Software, for example, but not limited to, for purposes of error correction, improvement of features, and enhancement of security features. Such updates or modifications may change or delete the nature of features or other aspects of the Sony Software, including features you may rely upon. You hereby agree that such activities may occur at Sony's sole discretion and that Sony may condition continued use of the Sony Software upon your complete installation or acceptance of such update or modifications. Sony may add to, change, or remove any part, term, or condition of the EULA as it applies to the Sony Software, the Services, and/or the Content at any time without prior notice to you. By continuing to access the

Services, the Sony Content Services, the Content, and/or the Sony Content after so posted, you are indicating your acceptance thereto. SONY MAY ADD, CHANGE, DISCONTINUE, REMOVE, OR SUSPEND ANY OF THE SERVICES OR THE SONY CONTENT SERVICES, TEMPORARILY OR PERMANENTLY, AT ANY TIME, WITHOUT NOTICE AND WITHOUT LIABILITY. WITHOUT PREJUDICE TO ANY OTHER RIGHTS, SONY MAY SUSPEND OR TERMINATE THIS EULA AS TO THE SERVICES, THE SONY CONTENT SERVICES, THE CONTENT, AND/OR THE SONY CONTENT IMMEDIATELY UPON NOTICE IF YOU FAIL TO COMPLY WITH THE TERMS AND CONDITIONS OF THIS EULA. Sony may take any legal and technical remedies to prevent violation of and/or to enforce this EULA, including, without limitation, immediate termination of your access to the Services, if Sony believes in its discretion that you are violating this EULA.

## **HIGH RISK ACTIVITIES**

The Sony Software is not fault-tolerant and is not designed, manufactured or intended for use or resale as on-line control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of the Sony Software could lead to death, personal injury, or severe physical or environmental damage ("High Risk Activities"). SONY, EACH OF THE THIRD PARTY LICENSORS, AND EACH OF THEIR RESPECTIVE AFFILIATES SPECIFICALLY DISCLAIM ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION OF FITNESS FOR HIGH RISK ACTIVITIES.

## **RESTRICTIONS ON EXPORT OF ENCRYPTION TECHNOLOGY**

The Sony Software and the Content may contain encryption technology. You acknowledge that any export of Sony Software or the Content containing encryption technology from your residence or subsequent re-export of such software by a person located outside of your residence might require a licence or other authorization from any governmental authority. By accepting this licence agreement, you agree to abide by all relevant U.S. export laws and regulations in the purchase and use of the Sony

product being acquired, including but not limited to those regulations relating to the export control of cryptographic items and not to transfer, or authorize the transfer, of the Sony Software or the Content to a prohibited country or otherwise in violation of any such restrictions or regulations.

## **JURY TRIAL WAIVER**

**EVEN IF TRIAL BY JURY MAY BE ADOPTED UNDER THE APPLICABLE LAW, THE PARTIES HERETO WAIVE TRIAL BY JURY WITH RESPECT TO ANY MATTERS ARISING UNDER OR RELATING TO THIS EULA TO THE MAXIMUM EXTENT AS PERMITTED UNDER THE APPLICABLE LAW.** Any cause of action you may have with respect to the Services must be commenced within one (1) year after the claim or cause of action arises to the maximum extent as permitted under the applicable law. Some jurisdictions do not allow limitations on the time for commencement of actions (or prescribe a longer period), so this limitation may not apply to you.

## **ENTIRE AGREEMENT, NOTICE, WAIVER, SEVERABILITY AND JURISDICTION**

This EULA, the limited warranty accompanying the Sony Product, Sony's then-current privacy policy, and any additional terms and conditions posted on the Services, together constitute the entire agreement between you and Sony with respect to the Sony Product, the Sony Software, the Services, and the Content. Any notice by Sony hereunder may be made by letter, e-mail, or posting on the Services. The failure of Sony to exercise or enforce any right or provision of this EULA shall not constitute a waiver of such right or provision. If any part of this EULA is held invalid, illegal, or unenforceable, that provision shall be enforced to the maximum extent permissible so as to maintain the intent of this EULA, and the other parts will remain in full force and effect. To the extent permissible by law, this agreement shall be governed by and construed in accordance with the laws of Japan.

## **EXCLUDED SOFTWARE**

Excluded Software included in the Sony Product is not subject to this EULA. Please refer to the section of this booklet entitled "NOTICES AND LICENCES FOR SOFTWARE" for a list of the applicable software and terms and conditions governing the use of such Excluded Software. Alternatively, if you do not have access to the

website page you can obtain a copy by writing to Sony (the contact point of which is described in the documents accompanying with Sony Product).

## **TERM**

This EULA is effective until terminated. Sony may terminate this EULA immediately if you fail to comply with its terms by giving you notice. In such event, you must destroy the Sony Software and accompanying documentation, and all copies you have made of them. In addition, upon termination you will have no recourse against Sony, its affiliates, its Third Party Licensors, or its Third Party Providers for your inability to use the Sony Software or the accompanying documentation, the Services, or the Content.

## **End User License Information**

### **Gracenote® End User License Agreement**

This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only.

You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. **YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.**

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any

information that you provide. You agree that Gracernote, Inc. may enforce its rights under this Agreement against you directly in its own name. The Gracernote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracernote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracernote Privacy Policy for the Gracernote service.

The Gracernote Software and each item of Gracernote Data are licensed to you "AS IS." Gracernote makes no representations or warranties, express or implied, regarding the accuracy of any Gracernote Data from in the Gracernote Servers. Gracernote reserves the right to delete data from the Gracernote Servers or to change data categories for any cause that Gracernote deems sufficient. No warranty is made that the Gracernote Software or Gracernote Servers are error-free or that functioning of Gracernote Software or Gracernote Servers will be uninterrupted. Gracernote is not obligated to provide you with new enhanced or additional data types or categories that Gracernote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

© Gracernote, Inc. 2009

# Table of Contents

WARNING .....	2
Precautions .....	4
Guide to Parts and Controls .....	13

---

## Hookups and Settings

Step 1: Connecting the Player .....	17
Step 2: Preparing for Network Connection (For BD-LIVE/Gracenote use) .....	20
Step 3: Easy Setup .....	21

---

## Playback

Playing a Disc .....	22
Playing from a USB Device .....	23
Playing via a Network .....	24
Available Options .....	25

---

## Settings and Adjustments

Using the Settings Displays .....	27
Network Update .....	27
Screen Settings .....	27
Audio Settings .....	29
BD/DVD Viewing Settings .....	30
Parental Control Settings .....	31
Music Settings .....	31
System Settings .....	31
Network Settings .....	32
Easy Setup .....	33
Resetting .....	33


---

## Additional Information

Troubleshooting .....	34
Specifications .....	37
Index .....	43

# Guide to Parts and Controls

## Front panel

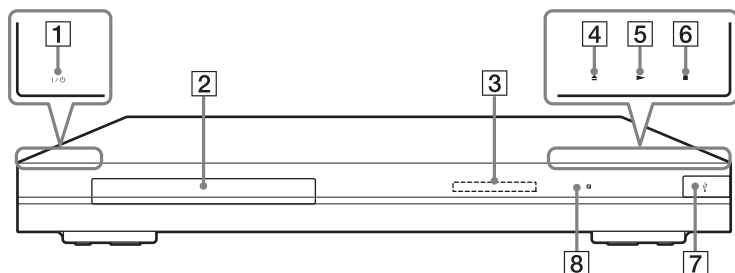

### 1 (on/standby)

Turns on the player, or sets to standby mode.

### 2 **Disc tray**

### 3 **Front panel display**

▶, ||: Lights up during playback or pause.

↺: Lights up when enabling the repeat setting.

HD: Lights up when outputting 720p/1080i/1080p video signals.

### 4 (open/close)

### 5 (play)

### 6 (stop)


### 7 (USB) jack

Connect a USB device to this jack.

 
 
 
### 8 **Remote sensor**

### To lock the disc tray (Child Lock)

You can lock the disc tray to prevent it being opened by mistake.

When the player is turned on, hold down  on the player for more than 10 seconds. The disc tray is locked or unlocked.

### About soft-touch buttons/indicators

These buttons, ,  and , function when the soft-touch button indicators are lit.

You can turn on/off the indicators by setting [Dimmer] in the [System Settings] setup (page 31).




These buttons work when you touch them lightly. Do not press them with excessive force.



These buttons still work, even if you turn off the indicators by setting [Dimmer] to [Off].


## Rear panel

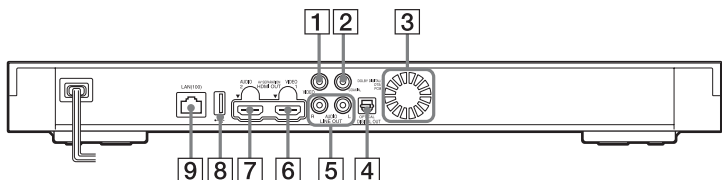

- |                                     |                                     |
|-------------------------------------|-------------------------------------|
| <b>1</b> LINE OUT (VIDEO) jack      | <b>5</b> LINE OUT (R-AUDIO-L) jacks |
| <b>2</b> DIGITAL OUT (COAXIAL) jack | <b>6</b> HDMI OUT 1 jack            |
| <b>3</b> Ventilation holes          | <b>7</b> HDMI OUT 2 jack            |
| <b>4</b> DIGITAL OUT (OPTICAL) jack | <b>8</b> (USB) jack                 |
|                                     | <b>9</b> LAN (100) terminal         |

## Remote

The available functions of the remote differ depending on the disc or the situation.

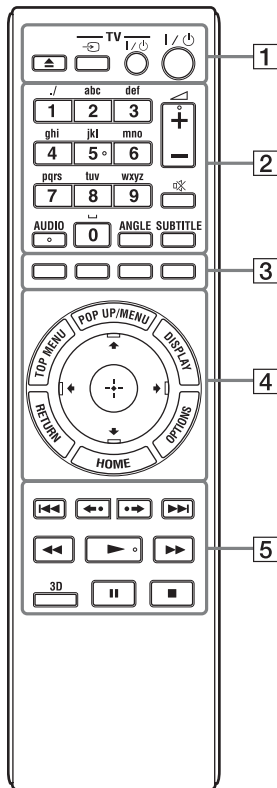

Number 5, AUDIO, +, and - buttons have a tactile dot. Use the tactile dot as a reference when operating the player.

### 1 (open/close)

Opens or closes the disc tray.

### -TV- (TV input select)

Switches between TV and other input sources.

### -TV- I/⏻ (on/standby)

Turns on the TV, or sets to standby mode.

### I/⏻ (on/standby)

Turns on the player, or sets to standby mode.

### 2 **Number buttons (0 - 9)**

Enters the title/chapter numbers, etc.

### (volume) +/-

Adjusts the TV volume.

### (muting)

Turns off the sound temporarily.

### AUDIO (page 30)

Selects the language track when multi-lingual tracks are recorded on BD-ROMs/DVD VIDEOS.

Selects the sound track on CDs.

### ANGLE

Switches to other viewing angles when multi-angles are recorded on BD-ROMs/DVD VIDEOS.

### SUBTITLE (page 30)

Selects the subtitle language when multi-lingual subtitles are recorded on BD-ROMs/DVD VIDEOS.

### 3 **Colour buttons (red/green/yellow/blue)**

Shortcut keys for interactive functions.

### 4 **TOP MENU**

Opens or closes the BD's or DVD's Top Menu.

### POP UP/MENU

Opens or closes the BD-ROM's Pop-up Menu, or the DVD's menu.

## DISPLAY (page 23)

Displays the playback and web browsing information on the screen.

## OPTIONS (page 25)

The options menu that can be selected appears on the screen.

## HOME

Enters the player's home menu.  
Displays the wallpaper when pressed on the category icon of the home menu.

## RETURN

Returns to the previous display.



Moves the highlight to select a displayed item.

## Centre button (ENTER)

Enters the selected item.

### 5 [◀◀/▶▶] (previous/next)

Skips to the previous/next chapter, track, or file.

### ◀•/•▶ (replay/advance)

Briefly replays the current scenes for 10 seconds/briefly fast forwards the current scenes for 15 seconds.

### ◀◀/▶▶ (fast/slow/freeze frame)

- Fast reverses/fast forwards the disc when pressed during playback. Each time you press the button during playback of videos, the search speed changes.
- Plays in slow motion, when pressed for more than one second in pause mode.
- Plays one frame at a time, when pressed briefly in pause mode.



Playback in slow motion or one frame is not available for a Blu-ray 3D Disc.

## ▶ (play)

Starts or re-starts playback.

## 3D (page 25)

Converts 2D content into simulated 3D content when connected to 3D-compatible devices.

## || (pause)


Pauses or re-starts playback.

## ■ (stop)

Stops playback and remembers the stop point (resume point).  
The resume point for a title/track is the last point you played or the last photo for a photo folder.

## Home menu display

The home menu appears when you press HOME. Select a category using ◀/▶. Select an item using ↑/↓, then press ENTER.

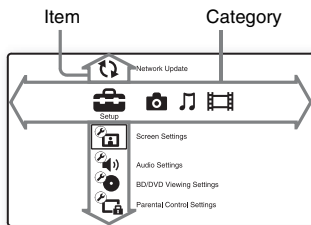

[Setup]: Adjusts the player settings.



[Photo]: Displays photos.



[Music]: Plays music.



[Video]: Plays videos.



## Hookups and Settings



### Step 1: Connecting the Player

Do not connect the mains lead until you have made all the other connections.  
For supplied accessories, see “Supplied accessories” (page 38).

#### Connecting to your TV

Select one of the following connection methods according to the input jacks on your TV.

Match the colour of the plug to that of the jack when connecting.

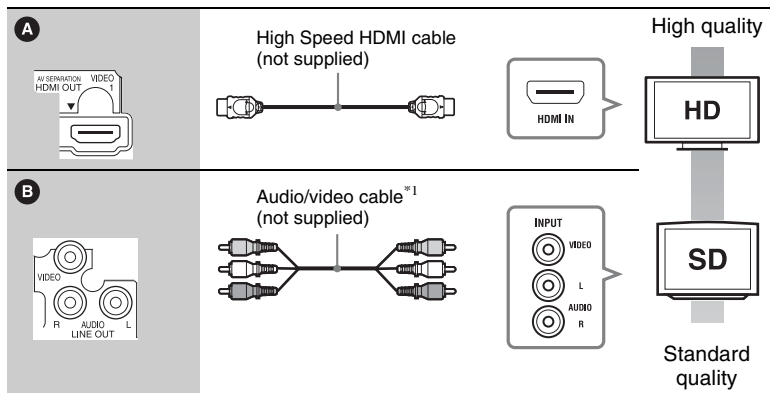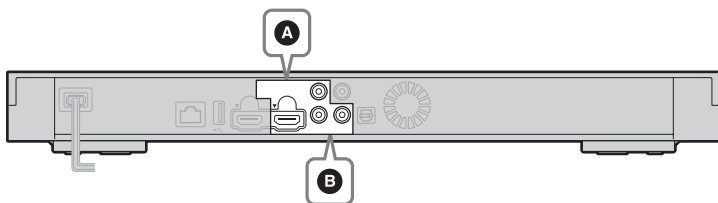


<sup>\*1</sup> Video of AACs encrypted content will not be displayed.




Do not connect the player through a VCR. Video signals fed through VCRs may be affected by copyright protection systems and the picture will be distorted on the television.

## Connecting to your AV amplifier (receiver)



Select one of the following connection methods according to the input jacks on your AV amplifier (receiver). When you select **A** or **B**, make the appropriate settings in the [Audio Settings] setup (page 29).

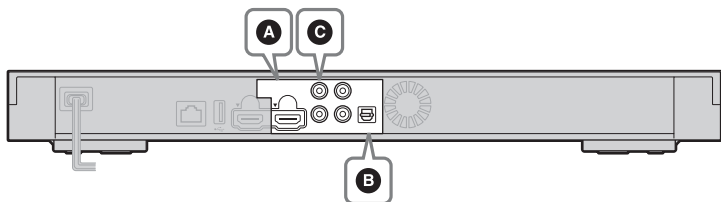



**A**

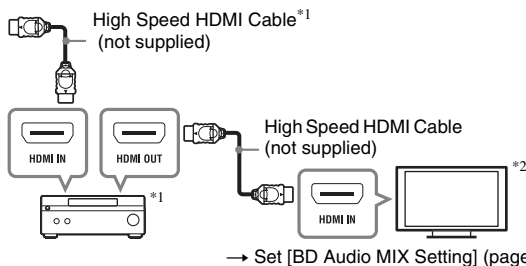

**B**

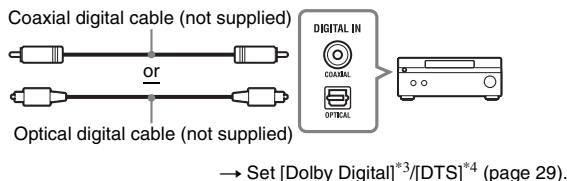 

**C**

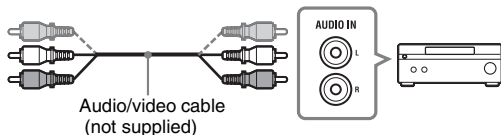 


Do not stack the player directly on top of the AV amplifier (receiver).

## About AV Separation Mode

This mode allows you to output video signals via the HDMI OUT 1 jack and audio signals via the HDMI OUT 2 jack separately (page 31).

Example:

The illustration below shows an example where a TV (3D-compatible) and an AV amplifier (not 3D-compatible) are connected.

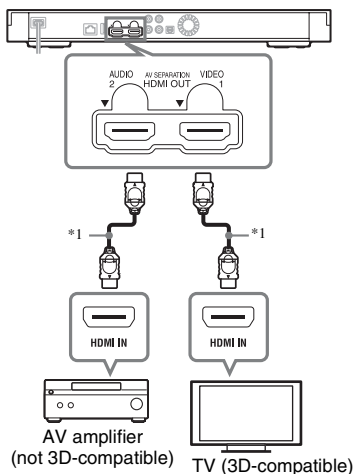

\*1 Use a High Speed HDMI Cable. We recommend using a Sony HDMI cable (available at your nearest Sony dealer or local authorized Sony service facility, with part number 1-834-169-22, as of June 2013, or equivalent).

\*2 To enjoy 3D viewing, connect a TV and an AV amplifier that are both 3D-compatible.

\*3 Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.


\*4 Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other

U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS-HD Master Audio is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

## Step 2: Preparing for Network Connection (For BD-LIVE/ Gracenote use)

### Wired Setup


Use a LAN cable to connect to the LAN (100) terminal on the player.

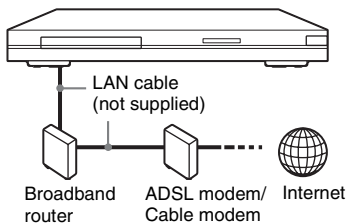

Using a shielded interface cable (LAN cable) is recommended.

### Wireless Setup

Use the wireless LAN that is built into the player.

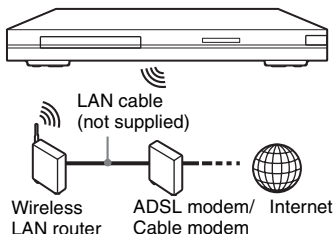

Use a wireless LAN router supporting 802.11b/g or 802.11b/g/n.

### Before setting the network settings

When your wireless LAN router (access point) is Wi-Fi Protected Setup (WPS)-compatible, you can easily set the network settings with the WPS button. If not, check the following information in advance, and record it in the space provided below.

- The network name (SSID<sup>\*1</sup>) that identifies your network<sup>\*2</sup>.

---

SSID<sup>\*1</sup>:

---

- If security is set on your wireless network, the security key (WEP key, WPA key)<sup>\*2</sup>.

---

Security key:

---

<sup>\*1</sup> SSID (Service Set Identifier) is a name that identifies a particular wireless network.

<sup>\*2</sup> You need to check the setting of your wireless LAN router for information about the SSID and security key.

For details:


- visit the following website:  
<http://support.sony-europe.com/>
- refer to the instruction manual supplied with the wireless LAN router
- consult the manufacturer of the wireless LAN router.

## Step 3: Easy Setup


### When turned on for the first time

Wait for a short while before the player turns on and starts [Easy Setup].


- 1 Insert two R6 (Size AA) batteries by matching the  $\oplus$  and  $\ominus$  ends on the batteries to the markings inside the battery compartment.

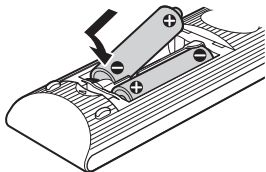

- 2 Plug the player into the mains.

 


- 3 Press I/⏻ to turn on the player.

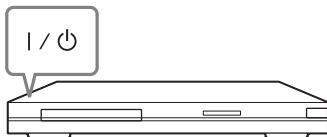

- 4 Turn on the TV, then switch the input selector on your TV so that the signal from the player appears on your TV screen.

- 5 Perform [Easy Setup].

Follow the on-screen instructions to make the basic settings using  $\leftarrow/\uparrow/\downarrow/\rightarrow$  and ENTER on the remote.

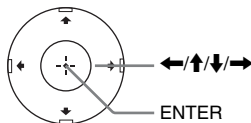


## Playback




# Playing a Disc

For playable discs, see “Playable discs” (page 38).

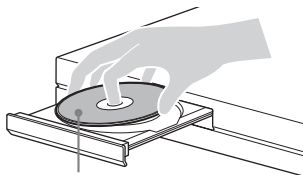- 1 Switch the input selector on your TV so that the signal from the player appears on your TV screen.
- 2 Press **▲**, and place a disc on the disc tray.



Playing side facing down

- 3 Press **▲** to close the disc tray. Playback starts.  
If playback does not start automatically, select **●** in the  [Video],  [Music], or  [Photo] category, and press ENTER.

## Enjoying BONUSVIEW/BD-LIVE

Some BD-ROMs with the “BD-LIVE” logo\* have bonus content and other data that can be downloaded for enjoyment.

\* 

- 1 Connect a USB memory to the USB jack on the rear of the player (page 14).

As your local storage, use a 1 GB or larger USB memory.


## 2 Prepare for BD-LIVE (BD-LIVE only).

- Connect the player to a network (page 20).
- Set [BD Internet Connection] to [Allow] (page 30).

## 3 Insert a BD-ROM with BONUSVIEW/BD-LIVE.

The operation method differs depending on the disc. Refer to the instruction manual supplied with the disc.



To delete data in the USB memory, select [Erase BD Data] in the  [Video], and press ENTER. All data stored in the buda folder will be erased.

## Enjoying Blu-ray 3D

You can enjoy a Blu-ray 3D Disc with the “Blu-ray 3D” logo\*.

\* 

## 1 Prepare for Blu-ray 3D Disc playback.

- Connect the player to your 3D-compatible devices using a High Speed HDMI cable.
- Set [3D Output Setting] and [TV Screen Size Setting for 3D] in the [Screen Settings] setup (page 27).

## 2 Insert a Blu-ray 3D Disc.

The operation method differs depending on the disc. Refer to the

instruction manual supplied with the disc.




Refer also to the instruction manuals supplied with your TV and the connected device.

## Displaying the play information

You can check playback information, etc., by pressing **DISPLAY**. The displayed information differs depending on the disc type and player status.

Example: when playing a BD-ROM

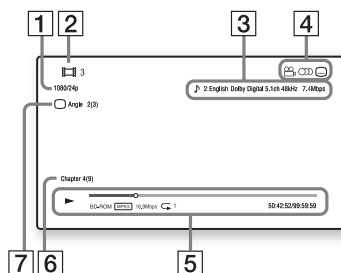

- 1** Output resolution/Video frequency
- 2** Title number or name
- 3** The currently selected audio setting
- 4** Available functions (angle, audio, subtitle)
- 5** Playback information  
Displays the Play mode, Playing status bar, Disc type, Video codec,

Bitrate, Repeat type, Elapsed time, and Total playing time.

- 6** Chapter number
- 7** The currently selected angle

## Playing from a USB Device

You can play video/music/photo files on the connected USB device.


For playable USB devices, see “Playable types of files” (page 39).

- 1** **Connect the USB device to the USB jack on the player (page 13).**  
Refer to the instruction manual supplied with the USB device before connecting.
- 2** Select [Video], [Music], or [Photo] on the home menu using **←/→**.
- 3** Select [USB device (front)] using **↑/↓**, and press **ENTER**.

# Playing via a Network

## Playing files on a Home Network

The player (Home Network Player) can play video/music/photo files stored on another Home Network-compatible product (Home Network Server) via a network.

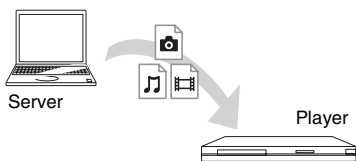

### 1 Prepare for using Home Network.

- Connect the player to a network (page 20).
- Prepare the other necessary Home Network-compatible products. Refer to the instruction manual supplied with the product.


### 2 Select the Home Network Server icon from [Video], [Music], or [Photo] on the home menu.

### 3 Select the file you want to play using /, and press ENTER.

### To control the player using another product (Renderer)

When you play files from a Home Network Server on the player, you can use a Home Network Controller-

compatible product (a phone, etc.) to control playback.

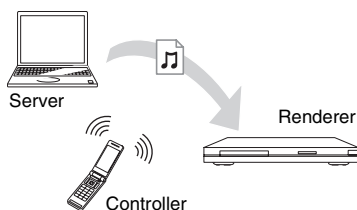

Refer to the instruction manual supplied with the Home Network Controller.

## Searching for the video/music information

You can acquire content information based on Gracenote technology and search for the related information.

### 1 Connect the player to a network (page 20).

### 2 Insert a disc you want to search.

- Video: For a BD-ROM or DVD-ROM only
- Music: For a CD-DA only

### 3 Select [Video] or [Music] using /.

### 4 Select [Video Search] or [Music Search] using /, and press ENTER.

The content information is displayed.

- Content details  
Displays a list of related information, such as title, cast, track, or artist.
- Playback History  
Displays a title in playback history



of a BD-ROM/DVD-ROM/CD-DA.

- Search History  
Displays a list of search history.

## To search for further related information

Select an item in the lists, then select the service for searching.

## Available Options

Various settings and playback operations are available by pressing **OPTIONS**. The available items differ depending on the situation.

### Common options

Item	Details
Repeat Setting	Sets the repeat mode.
3D Menu	<ul style="list-style-type: none"><li>• Simulated 3D: Adjusts the simulated 3D effect.</li><li>• 3D Depth Adjustment: Adjusts the depth of 3D image.</li></ul>
Play/Stop	Starts or stops the playback.
Play from start	Plays the item from the beginning.

### [Video] only

Item	Details
3D Output Setting	Sets whether or not to output 3D video automatically.

Item	Details
A/V SYNC	Adjusts the gap between picture and sound, by delaying the sound output in relation to the picture output (0 to 120 milliseconds).
Video Settings	<ul style="list-style-type: none"><li>• Picture Quality Mode: Selects the picture settings.</li><li>• Texture Remaster: Adjusts the sharpness and detail of the edges.</li><li>• Super Resolution: Improves the resolution.</li><li>• Smoothing: Reduces on-screen banding by smoothing gradations on flat areas.</li><li>• Contrast Remaster: Automatically arranges the black and white levels so that the screen is not too dark and the image is modulated.</li><li>• Clear Black: Adjusts the display of the dark elements of the image. All shading is not suppressed; it allows beautifully reproduced black tones.</li></ul>
Pause	Pauses the playback.
Top Menu	Displays the BD's or DVD's Top Menu.
Menu/Popup Menu	Displays the BD-ROM's Pop-up Menu or DVD's menu.

Item	Details
Title Search	Searches for a title on BD-ROMs/DVD VIDEOS and starts playback from the beginning.
Chapter Search	Searches for a chapter and starts playback from the beginning.
Angle	Switches to other viewing angles when multi-angles are recorded on BD-ROMs/DVD VIDEOS.
Video Search	Displays information on the BD-ROM/DVD-ROM based on Gracenote technology.

### [Music] only

Item	Details
Add Slideshow BGM	Registers music files in the USB memory as slideshow background music (BGM).
Music Search	Displays information on the CD-DA based on Gracenote technology.


### [Photo] only

Item	Details
Slideshow Speed	Changes the slideshow speed.
Slideshow Effect	Sets the effect for slideshows.






Item	Details
Slideshow BGM	<ul style="list-style-type: none"> <li>• Off: Turns off the function.</li> <li>• My Music from USB: Sets the music files registered in [Add Slideshow BGM].</li> <li>• Play from Music CD: Sets the tracks in CD-DAs.</li> </ul>
Change Display	Switches between [Grid View] and [List View].
Slideshow	Plays a slideshow.
Rotate Left	Rotates the photo counterclockwise by 90 degrees.
Rotate Right	Rotates the photo clockwise by 90 degrees.






## Settings and Adjustments






# Using the Settings Displays

Select  [Setup] on the home menu when you need to change the settings of the player.

The default settings are underlined.

- 1 Select  [Setup] on the home menu using / .
- 2 Select the setup category icon using / , and press ENTER.

Icon	Explanation
	<b>Network Update (page 27)</b> Updates the software of the player.
	<b>Screen Settings (page 27)</b> Makes the video settings according to the type of connecting jacks.
	<b>Audio Settings (page 29)</b> Makes the audio settings according to the type of connecting jacks.
	<b>BD/DVD Viewing Settings (page 30)</b> Makes detailed settings for BD/DVD playback.
	<b>Parental Control Settings (page 31)</b> Makes detailed settings for the Parental Control function.

Icon	Explanation
	<b>Music Settings (page 31)</b> Makes detailed settings for Super Audio CD playback.
	<b>System Settings (page 31)</b> Makes the player-related settings.
	<b>Network Settings (page 32)</b> Makes detailed settings for the Internet and network.
	<b>Easy Setup (page 33)</b> Re-runs the Easy Setup to make the basic settings.
	<b>Resetting (page 33)</b> Resets the player to the factory settings.

## Network Update

Select [OK] to update the player's software via the network.



- We recommend the network update every 2 months or so.
- For information about update functions, visit the following website:  
<http://support.sony-europe.com/>

## Screen Settings

### 3D Output Setting

Auto: Normally select this.

Off: Select this to display all content in 2D.



If you enjoy 4K/24p 3D contents, set to [Off] in [3D Output Setting].

---

## TV Screen Size Setting for 3D

Sets the screen size of your 3D-compatible TV.

---

### TV Type

**16:9:** Select this when connecting to a wide-screen TV or a TV with a wide mode function.

**4:3:** Select this when connecting to a 4:3 screen TV without a wide mode function.

---

### Screen Format

**Full:** Select this when connecting to a TV with a wide mode function.  
Displays a 4:3 screen picture in 16:9 aspect ratio, even on a wide-screen TV.

**Normal:** Changes the picture size to fit the screen size with the original picture aspect ratio.

 
---

### DVD Aspect Ratio

**Letter Box:** Displays a wide picture with black bands on the top and bottom.



**Pan & Scan:** Displays a full-height picture on the entire screen, with trimmed sides.



---

## Cinema Conversion Mode

**Auto:** Normally select this. The player automatically detects whether the material is video-based or film-based, and switches to the appropriate conversion method.

**Video:** The conversion method suited for video-based material will always be selected, regardless of the material.

---

### Output Video Format

**HDMI:** Normally select [Auto]. Select [Original Resolution] to output the resolution recorded on the disc.  
When the resolution is lower than the SD resolution, it is scaled up to the SD resolution.

**Video:** Automatically sets the lowest resolution.

---

### BD-ROM 24p Output

**Auto:** Outputs 1080/24p or 4K/24p video signals only if you connect a 1080/24p or 4K/24p-compatible TV with the HDMI OUT jack.

**On:** Select this if your TV is compatible with 1080/24p or 4K/24p video signals.

**Off:** Select this if your TV is not compatible with 1080/24p or 4K/24p video signals.

---

### DVD-ROM 24p Output

**Auto:** Outputs 1080/24p or 4K/24p video signals only if you connect a 1080/24p or 4K/24p-compatible TV with the HDMI OUT jack.

**Off:** Select this if your TV is not compatible with 1080/24p or 4K/24p video signals.

---

## 4K Output

Auto: Outputs 4K/24p video signals automatically if you connect a 4K/24p-compatible device and make the appropriate settings in [BD-ROM 24p Output] or [DVD-ROM 24p Output], and also outputs 4K/24p photo images if you play 2D photo files.

Off: Turns off the function.

---

## YCbCr/RGB (HDMI)

Auto: Automatically detects the connected TV type, and switches to the matching colour setting.

YCbCr (4:2:2): Outputs YCbCr 4:2:2 video signals.

YCbCr (4:4:4): Outputs YCbCr 4:4:4 video signals.

RGB: Outputs RGB video signals.

---

## HDMI Deep Colour Output

Auto: Normally select this.

16bit/12bit/10bit: Outputs 16bit/12bit/10bit video signals when the connected TV is compatible with Deep Colour.

Off: Select this when the picture is unstable or colours appear unnatural.

---

## SBM (Super Bit Mapping)

On: Smooths the gradation of video signals output from the HDMI OUT jack.

Off: Select this when outputting distorted video signals or unnatural colour.

---



---

## Pause Mode

Auto: Normally select this. Dynamic moving pictures appear without blurring.

Frame: Displays static pictures at high resolution.

---



## Audio Settings

---

### Audio (HDMI)

Auto: Normally select this. Outputs audio signals according to the status of the connected HDMI device.

PCM: Outputs PCM signals from the HDMI OUT jack.

---

### DSD Output Mode

On: Outputs DSD signals from the HDMI OUT jack when playing a Super Audio CD. When [On] is selected, no signal is output from other jacks.

Off: Outputs PCM signals from the HDMI OUT jack when playing a Super Audio CD.

---

### BD Audio MIX Setting

On: Outputs the audio obtained by mixing the interactive and secondary audio to the primary audio.

Off: Outputs the primary audio only. Select this to output HD audio signals to an AV amplifier (receiver).

---

### Dolby Digital / DTS

Downmix PCM: Converts to output Linear PCM signals. Select this when connecting an audio device

without a built-in Dolby Digital/DTS decoder.

Bitstream: Select this when connecting an audio device with a built-in Dolby Digital/DTS decoder.

---

### DTS Neo:6

Cinema: Outputs the simulated multi-channel sound from 2 channel sources via the HDMI OUT jack according to the capability of the connected device using [DTS Neo:6 Cinema] mode.

Music: Outputs the simulated multi-channel sound from 2 channel sources via the HDMI OUT jack according to the capability of the connected device using [DTS Neo:6 Music] mode.

Off: Outputs the sound with its original number of channels via the HDMI OUT jack.

---

### Audio DRC

Auto: Performs playback at the dynamic range specified by the disc (BD-ROM only). Other discs are played back at the [On] level.

On: Performs playback at a standard compression level.

Off: No compression works. A more dynamic sound is produced.

---

### Downmix

Surround: Outputs audio signals with surround effects. Select this when connecting an audio device that supports Dolby Surround (Pro Logic) or DTS Neo:6.

Stereo: Outputs audio signals without surround effects. Select this when connecting an audio device that does not support Dolby Surround (Pro Logic) or DTS Neo:6.

---

## BD/DVD Viewing Settings

---

### BD/DVD Menu Language

Selects the default menu language for BD-ROMs or DVD VIDEOS.

When you select [Select Language Code], the display for entering the language code appears. Enter the code for your language by referring to “Language code list” (page 41).

---

### Audio Language

Selects the default track language for BD-ROMs or DVD VIDEOS.

When you select [Original], the language given priority in the disc is selected.

When you select [Select Language Code], the display for entering the language code appears. Enter the code for your language by referring to “Language code list” (page 41).

---

### Subtitle Language

Selects the default subtitle language for BD-ROMs or DVD VIDEOS.

When you select [Select Language Code], the display for entering the language code appears. Enter the code for your language by referring to “Language code list” (page 41).

---

### BD Hybrid Disc Playback Layer

BD: Plays BD layer.

DVD/CD: Plays DVD or CD layer.

---

### BD Internet Connection

Allow: Normally select this.

Do not allow: Prohibits Internet connection.

## Parental Control Settings

### Password

Sets or changes the password for the Parental Control function. A password allows you to set a restriction on BD-ROM or DVD VIDEO playback. If necessary, you can differentiate the restriction levels for BD-ROMs and DVD VIDEOS.

### Parental Control Area Code

Playback of some BD-ROMs and DVD VIDEOS can be limited according to the geographic area. Scenes may be blocked or replaced with different scenes. Follow the on-screen instructions and enter your four-digit password.

### BD Parental Control/DVD Parental Control

By setting Parental Control, scenes can be blocked or replaced with different scenes. Follow the on-screen instructions and enter your four-digit password.

## Music Settings

### Super Audio CD Playback Layer

Super Audio CD: Plays the Super Audio CD layer.

CD: Plays the CD layer.

### Super Audio CD Playback Channels

DSD 2ch: Plays the 2ch area.

DSD Multi: Plays the multi-channel area.

## System Settings

### OSD Language

Selects your language for the player on-screen displays.

### Dimmer

Bright: Bright lighting.

Dark: Low lighting.

Off: Turns off the lighting during playback. Low lighting other than during playback.

### Control for HDMI

On: The following BRAVIA Sync features are available:

- One-Touch Play
- System Power-Off
- Language Follow

Off: Turns off the function.



For details, refer to the instruction manual supplied with the TV or components. To enable the BRAVIA Sync features, connect your TV via the HDMI OUT 1 jack.

### HDMI:Linked to TV-off

On: Automatically turns off the player and HDMI-compatible components when the connected TV enters standby mode (BRAVIA Sync).

Off: Turns off the function.

### AV Separation Output Mode

On: Outputs video signals via the HDMI OUT 1 jack and audio signals via the HDMI OUT 2 jack separately.

**Off:** Outputs video signals and audio signals simultaneously via both the HDMI OUT 1 jack and the HDMI OUT 2 jack.

---

### Auto Standby

**On:** Automatically returns to standby mode if no button is pressed for more than 20 minutes.

**Off:** Turns off the function.

---

### Auto Display

**On:** Automatically displays information on the screen when changing the viewing titles, picture modes, audio signals, etc.

**Off:** Displays information only when you press DISPLAY.

---

### Screen Saver

**On:** Turns on the screen saver function. The screen saver image appears when you do not use the player for more than 10 minutes while an on-screen display is displayed.

**Off:** Turns off the function.

---

### Software Update Notification

**On:** Sets the player to inform you of newer software version information (page 27).

**Off:** Turns off the function.

---

### Gracenote Settings

**Auto:** Automatically downloads disc information when disc playback stops. Connect to the network for downloading.

**Manual:** Downloads the disc information when [Video Search] or [Music Search] is selected.

---

### System Information

Displays the player's software version information and the MAC address.

---

### Software License Information

Displays the Software License Information.



## Network Settings

---

### Internet Settings

Connect the player to the network beforehand. For details, see "Step 2: Preparing for Network Connection (For BD-LIVE/Gracenote use)" (page 20).

**Wired Setup:** Select this when you connect to a broadband router using a LAN cable.

**Wireless Setup(built-in):** Select this when you use the wireless LAN that is built into the player for wireless network connection.

**View Network Status:** Displays the current network status.



For further details, visit the following website and check the FAQ contents:

**<http://support.sony-europe.com/>**

---

### Network Connection Diagnostics

You can run the network diagnostic to check if the network connection has been made properly.

---

### Connection Server Settings

Sets whether or not to display the connected server.



---

## Renderer Set-up

**Automatic Access Permission:** Sets whether or not to allow automatic access from a newly detected Home Network controller-compatible product.

**Renderer Name:** Displays the player's name as it is listed on other Home Network products on the network.

---

## Renderer Access Control

Displays a list of Home Network controller-compatible products and sets whether or not each product is accessible via this player.

---

## TV SideView Device Registration

Registers your "TV SideView" device.

---

## Registered TV SideView Devices

Displays a list of your registered "TV SideView" devices.



## Easy Setup

---

### Easy Initial Settings

Runs [Easy Initial Settings] to make the basic settings. Follow the on-screen instructions.

---

### Easy Network Settings

Runs [Easy Network Settings] to make the basic network settings. Follow the on-screen instructions.



## Resetting

---

### Reset to Factory Default Settings

You can reset the player settings to the factory default by selecting the group of settings. All the settings within the group will be reset.

---

### Initialize Personal Information

You can erase your personal information stored in the player.

## Additional Information

# Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

## Picture

### There is no picture or the picture is not output correctly.

- ➔ Check that all the connecting cables are securely connected (page 17).
- ➔ Switch the input selector on your TV to display the signal from the player.
- ➔ Reset the video output resolution to the lowest resolution by pressing ■ on the player for more than 10 seconds.
- ➔ For HDMI connections, try the following: ①Turn the player off and on again. ②Turn the connected equipment off and on again. ③Disconnect and then reconnect the HDMI cable.
- ➔ The HDMI OUT jack is connected to a DVI device that does not support copyright protection technology.
- ➔ For HDMI connections, check the [Output Video Format] settings in the [Screen Settings] setup (page 28).
- ➔ When the analogue signals are also output, set [BD-ROM 24p Output] or [DVD-ROM 24p Output] to [Off] in the [Screen Settings] setup (page 28).
- ➔ For BD-ROMs, check the [BD-ROM 24p Output] setting in the [Screen Settings] setup (page 28).

### The display language on the screen switches automatically when connected to the HDMI OUT jack.

- ➔ When [Control for HDMI] is set to [On] (page 31), the display language on the screen automatically switches according to the language setting of the connected TV (if you change the setting on your TV, etc.).

## Sound

### There is no sound or the sound is not output correctly.

- ➔ Check that all the connecting cables are securely connected (page 17).
- ➔ Switch the input selector on your AV amplifier (receiver) so that the audio signals of the player are output from your AV amplifier (receiver).
- ➔ If the audio signal does not come through the DIGITAL OUT (OPTICAL/COAXIAL)/HDMI OUT jack, check the audio settings (page 29).
- ➔ For HDMI connections, try the following: ①Turn the player off and on again. ②Turn the connected equipment off and on again. ③Disconnect and then reconnect the HDMI cable.
- ➔ For HDMI connections, if the player is connected to a TV through an AV amplifier (receiver), try connecting the HDMI cable directly to the TV. Refer also to the instruction manual supplied with the AV amplifier (receiver).
- ➔ There is no sound if you connect an AV amplifier to the HDMI OUT 1 jack, and set [AV Separation Output Mode] to [On] (page 31). Set [AV Separation Output Mode] to [Off], or connect the AV amplifier to the HDMI

OUT 2 jack (See “About AV Separation Mode” (page 19).).

- ➔ The HDMI OUT jack is connected to a DVI device. (DVI jacks do not accept audio signals.)
- ➔ The device connected to the HDMI OUT jack does not support the audio format of the player. Check the audio settings (page 29).

---

### **The HD Audio (Dolby Digital Plus, Dolby TrueHD, DTS-HD High Resolution Audio, and DTS-HD Master Audio) is not output by bitstream.**

- ➔ Set [BD Audio MIX Setting] to [Off] in the [Audio Settings] setup (page 29).
- ➔ Check that the connected AV amplifier (receiver) is compatible with each HD Audio format.

---

### **The interactive audio is not output.**

- ➔ Set [BD Audio MIX Setting] to [On] in the [Audio Settings] setup (page 29).

## **Disc**

### **The disc does not play.**

- ➔ The disc is dirty or skewed.
- ➔ The disc is upside down. Insert the disc with the playback side facing down.
- ➔ The disc has a format that cannot be played back by this player (page 38).
- ➔ The player cannot play a recorded disc that has not been correctly finalised.
- ➔ The region code on the BD or DVD does not match the player.

## **USB device**

### **The player does not detect a USB device connected to the player.**

- ➔ Make sure that the USB device is securely connected to the USB jack.
- ➔ Check if the USB device or a cable is damaged.
- ➔ Check if the USB device is on.
- ➔ If the USB device is connected via a USB hub, connect the USB device directly to the player.

## **Network connection**

### **The player cannot connect to the network.**

- ➔ Check the network connection (page 20) and the network settings (page 32).

---

### **You cannot connect your PC to the Internet after [Wi-Fi Protected Setup (WPS)] is performed.**

- ➔ The wireless settings of the router may change automatically if you use the Wi-Fi Protected Setup function before adjusting the settings of the router. In this case, change the wireless settings of your PC accordingly.

---

### **You cannot connect the player to the wireless LAN router.**

- ➔ Check if the wireless LAN router is on.
- ➔ Depending on the surrounding environment, such as the wall material, radio wave receiving condition, or obstacles between the player and the wireless LAN router, the communication distance may be shortened. Move the player and the

wireless LAN router closer to each other.

- ➔ Devices that use a 2.4 GHz frequency band, such as a microwave, Bluetooth, or digital cordless device, may interrupt the communication. Move the player away from such devices, or turn off such devices.

---

### **The desired wireless router is not shown in the wireless network list.**

- ➔ Press RETURN to return to the previous screen, and try [Wireless Setup(built-in)] again. If the desired wireless router is still not detected, select [Manual registration].

---

### **The message [A new software version is available. Please go to the "Setup" section of the menu and select "Network update" to perform the update.] appears on the screen when turning the player on.**

- ➔ See "Network Update" (page 27) to update the player to a newer software version.

## **"Control for HDMI" (BRAVIA Sync)**

### **The [Control for HDMI] function does not work (BRAVIA Sync).**

- ➔ Check that your TV is connected via the HDMI OUT 1 jack. If your TV is connected via the HDMI OUT 2 jack, BRAVIA Sync is disabled.
- ➔ Check that [Control for HDMI] is set to [On] (page 31).
- ➔ If you change the HDMI connection, turn the player off and on again.

- ➔ If power failure occurs, set [Control for HDMI] to [Off], then set [Control for HDMI] to [On] (page 31).

- ➔ Check the following and refer to the instruction manual supplied with the component.
  - the connected component is compatible with the [Control for HDMI] function.
  - the connected component's setting for the [Control for HDMI] function is correct.

- ➔ When you connect the player to a TV through an AV amplifier (receiver),
  - if the AV amplifier (receiver) is not compatible with the [Control for HDMI] function, you may be unable to control the TV from the player.
  - if you change the HDMI connection, disconnect and reconnect the mains lead, or a power failure occurs, try the following:
    - ① Switch the input selector of the AV amplifier (receiver) so that the picture from the player appears on the TV screen.
    - ② Set [Control for HDMI] to [Off], then set [Control for HDMI] to [On] (page 31). Refer to the instruction manual supplied with the AV amplifier (receiver).

---

### **The System Power-Off function does not work (BRAVIA Sync).**

- ➔ Check that [Control for HDMI] and [HDMI:Linked to TV-off] are set to [On] (page 31).

## **Others**

### **Playback does not start from the beginning of content.**

- ➔ Press OPTIONS, and select [Play from start].

### Playback does not start from the resume point where you last stopped playing.

- ➔ The resume point may be cleared from memory depending on the disc when
- you open the disc tray.
  - you disconnect the USB device.
  - you play other content.
  - you turn off the player.

### The disc tray does not open and “LOCK” or “D ON” appears on the front panel display.

- ➔ When “LOCK” appears, the player is locked. To cancel the Child Lock, hold down **▶** on the player until “UNLOCK” appears on the front panel display (page 13).
- ➔ When “D ON” appears, contact your Sony dealer or local authorised Sony service facility.

### The disc tray does not open and you cannot remove the disc even after you press **▲**.

- ➔ Try the following: ① Press down **▲** and **▶** on the player for more than 10 seconds, until the tray opens.
- ② Remove the disc. ③ When “OPEN” appears on the front panel display, press down **⏻** on the player for more than 10 seconds, until the player turns off.

### “Exxxx” or “TEMP” appears on the front panel display.

- ➔ When “Exxxx” appears, contact your nearest Sony dealer or local authorised Sony service facility and give the error code.
- ➔ When “TEMP” appears, try the following: ① Check that the ventilation holes on the rear of the

player are not blocked. ② Place the player in a location with adequate ventilation to prevent heat build-up in the player.

### The player does not respond to any button.

- ➔ Moisture has condensed inside the player (page 4).
- ➔ Hold down **⏻** on the player for more than 10 seconds until the indicators on the front panel display turn off. If the player still does not respond to any button, disconnect then reconnect the mains lead.

## Specifications

### System

**Laser:** Semiconductor laser

### Inputs and outputs

#### (Jack name:

Jack type/Output level/Load impedance)

#### LINE OUT R-AUDIO-L:

Phono jack/2 Vrms/10 kilohms

#### DIGITAL OUT (OPTICAL):

Optical output jack/–18 dBm (wave length 660 nm)

#### DIGITAL OUT (COAXIAL):

Phono jack/0.5 Vp-p/75 ohms

#### HDMI OUT:

HDMI 19-pin standard connector

#### LINE OUT VIDEO:

Phono jack/1.0 Vp-p/75 ohms

#### LAN (100):

100BASE-TX Terminal

#### USB:

USB jack Type A (For connecting a USB memory, memory card reader, digital still camera, and digital video camera)

## Wireless

### Wireless LAN standard:

IEEE802.11b/g/n

### Frequency range:

2.4 GHz band: Channels 1-13

### Modulation:

DS-SS Modem and OFDM Modem

## General

### Power requirements:

220–240 V AC, 50/60 Hz

### Power consumption:

21 W

### Dimensions (approx.):

430 mm × 193 mm × 49 mm

(width/depth/height) incl. projecting parts

### Mass (approx.):

2.0 kg

### Operating temperature:

5 °C to 35 °C

### Operating humidity:

25 % to 80 %

## Supplied accessories

Remote commander (remote) (1)

R6 (Size AA) batteries (2)

Specifications and design are subject to change without notice.

## Playable discs

<b>Blu-ray Disc</b> <sup>*1</sup>	BD-ROM BD-R <sup>*2</sup> /BD-RE <sup>*2</sup>
<b>DVD</b> <sup>*3</sup>	DVD-ROM DVD-R/DVD-RW DVD+R/DVD+RW
<b>CD</b> <sup>*3</sup>	CD-DA (Music CD) CD-ROM CD-R/CD-RW Super Audio CD

<sup>\*1</sup> Since the Blu-ray Disc specifications are new and evolving, some discs may not be playable depending on the disc type and the version.

The audio output differs depending on the source, connected output jack, and selected audio settings.

<sup>\*2</sup> BD-RE: Ver.2.1

BD-R: Ver.1.1, 1.2, 1.3 including organic pigment type BD-R (LTH type)

The BD-Rs recorded on a PC cannot be played if postscripts are recordable.

<sup>\*3</sup> A CD or DVD disc will not play if it has not been correctly finalised. For more information, refer to the instruction manual supplied with the recording device.

## Discs that cannot be played

- BDs with cartridge
- BDXLs
- DVD-RAMs
- HD DVDs
- DVD Audio discs
- PHOTO CDs
- Data part of CD-Extras
- Super VCDs
- Audio material side on DualDiscs

## Note on Discs

This product is designed to playback discs that conform to the Compact Disc (CD) standard. DualDiscs and some of the music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard, therefore, these discs may not be playable by this product.


## Note on playback operations of BDs/DVDs

 
Some playback operations of BDs/DVDs may be intentionally set by software producers. Since this player plays BDs/DVDs according to the disc contents the software producers designed, some playback features may not be available.

## Note about double-layer BDs/DVDs

The playback pictures and sound may be momentarily interrupted when the layers switch.

## Region code (BD-ROM/DVD VIDEO only)

Your player has a region code printed on the rear of the unit and will only play BD-ROMs/DVD VIDEOS labelled with identical region codes or .



Region code

## Playable types of files

### Video

File format	Extensions
MPEG-1 Video/PS <sup>*1*2</sup> MPEG-2 Video/PS, TS <sup>*1*3</sup>	“.mpg,” “.mpeg,” “.m2ts,” “.mts”
MPEG-4 AVC <sup>*1*2</sup>	“.mkv,” “.mp4,” “.m4v,” “.m2ts,” “.mts”
WMV9 <sup>*1*2</sup>	“.wmv,” “.asf”
AVCHD <sup>*2*4</sup>	*5
Xvid	“.avi”

### Music

File format	Extensions
MP3 (MPEG-1 Audio Layer III)	“.mp3”
AAC/HE-AAC <sup>*1*2*6</sup>	“.m4a”
WMA9 Standard <sup>*1*2*6</sup>	“.wma”
LPCM	“.wav”

### Photo

File format	Extensions
JPEG	“.jpg,” “.jpeg”
PNG	“.png <sup>*7</sup> ”
GIF	“.gif <sup>*7</sup> ”
MPO	“.mpo <sup>*8</sup> ”

<sup>\*1</sup> The player does not play coded files such as DRM.

<sup>\*2</sup> The player does not play this file format on a Home Network server.

<sup>\*3</sup> The player can only play standard definition video on a Home Network server.

- \*4 The player can play AVCHD Ver. 2.0 (AVCHD 3D/Progressive) format files.
- \*5 The player plays AVCHD format files that are recorded on a digital video camera, etc. The AVCHD format disc will not play if it has not been correctly finalised.
- \*6 The player does not play coded files such as Lossless.
- \*7 The player does not play animated PNG or animated GIF files.
- \*8 For MPO files other than 3D, the key image or the first image is displayed.



- Some files may not play depending on the file format, file encoding, recording condition, or Home Network server condition.
- Some files recorded or edited on a PC may not play.
- The player can recognise the following files or folders in BDs, DVDs, CDs and USB devices:
  - up to folders in the 9th layer, including the root folder
  - up to 500 files/folders in a single layer
- The player can recognise the following files or folders stored in the Home Network server:
  - up to folders in the 19th layer
  - up to 999 files/folders in a single layer
- Some USB devices may not work with this player.
- The player can recognise Mass Storage Class (MSC) devices (such as flash memory or an HDD), Still Image Capture Device (SICD) class devices and 101 keyboard (front USB jack only).
- To avoid data corruption or damage to the USB memory or devices, turn the player off when connecting or removing the USB memory or devices.
- The player may not play high bit rate video files on DATA CDs smoothly. You are recommended to play such files using a DATA DVD or DATA BD.

## About wireless LAN security

Since communication via the wireless LAN function is established by radio waves, the wireless signal may be susceptible to interception. To protect wireless communication, this player supports various security functions. Be sure to correctly configure the security settings in accordance with your network environment.

### ◆ No Security

Although you can easily make settings, anyone can intercept wireless communication or intrude into your wireless network, even without any sophisticated tools. Keep in mind that there is a risk of unauthorized access or interception of data.

### ◆ WEP

WEP applies security to communications to prevent outsiders from intercepting communications or intruding into your wireless network. WEP is a legacy security technology that enables older devices, which do not support TKIP/AES, to be connected.

### ◆ WPA-PSK (TKIP), WPA2-PSK (TKIP)

TKIP is a security technology developed to correct for the deficiencies of WEP. TKIP assures a higher security level than WEP.

### ◆ WPA-PSK (AES), WPA2-PSK (AES)

AES is a security technology that uses an advanced security method that is distinct from WEP and TKIP.

AES assures a higher security level than WEP or TKIP.



## Notes About the Discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface. Dust, fingerprints, or scratches on the disc may cause it to malfunction.




- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.
- Clean the disc with a cleaning cloth. Wipe the disc from the centre out.



- Do not use solvents such as benzene, thinner, commercially available disc/lens cleaners, or anti-static spray intended for vinyl LPs.
- If you have printed the disc's label, dry the label before playing.
- Do not use the following discs.
  - A lens cleaning disc.
  - A disc that has a non-standard shape (e.g., card, heart).
  - A disc with a label or sticker on it.
  - A disc that has cellophane tape or sticker adhesive on it.
- Do not resurface the playing side of a disc to remove surface scratches.

## Code numbers of controllable TVs

While holding down -TV- , enter the TV manufacturer's code using the number buttons.

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code number
Sony	01 (default)
Hitachi	24
LG/Goldstar	76
Loewe	45
Panasonic	17, 49
Philips	06, 08, 72
Samsung	71
Sharp	29
Toshiba	38

## Language code list

For details, see "BD/DVD Viewing Settings" (page 30).

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code Language			
1027	Afar	1028	Abkhazian
1032	Afrikaans	1039	Amharic
1044	Arabic	1045	Assamese
1051	Aymara	1052	Azerbaijani
1053	Bashkir	1057	Byelorussian
1059	Bulgarian	1060	Bihari
1061	Bislama	1066	Bengali
1067	Tibetan	1070	Breton
1079	Catalan	1093	Corsican
1097	Czech	1103	Welsh
1105	Danish	1109	German
1130	Bhutani; Dzongkha	1142	Greek

Code Language	
1144	English
1149	Spanish
1151	Basque
1165	Finnish
1171	Faroese
1181	Frisian
1186	Scots Gaelic
1196	Guarani
1209	Hausa
1226	Croatian
1233	Armenian
1239	Interlingue
1248	Indonesian
1254	Italian
1261	Japanese
1283	Javanese
1297	Kazakh
1299	Cambodian; Khmer
1301	Korean
1307	Kurdish
1313	Latin
1327	Laothian; Lao
1334	Latvian
1347	Maori
1350	Malayalam
1353	Moldavian
1357	Malay
1363	Burmese
1369	Nepali
1379	Norwegian
1403	Oromo
1417	Punjabi; Panjabi
1435	Pashto; Pushto
1463	Quechua
1482	Kirundi; Rundi
1489	Russian
1495	Sanskrit
1501	Sangho; Sango
1503	Singhalese; Sinhalese
1506	Slovenian
1508	Shona
1511	Albanian
1145	Esperanto
1150	Estonian
1157	Persian
1166	Fiji
1174	French
1183	Irish
1194	Galician
1203	Gujarati
1217	Hindi
1229	Hungarian
1235	Interlingua
1245	Inupiak
1253	Icelandic
1257	Hebrew
1269	Yiddish
1287	Georgian
1298	Greenlandic; Kalaallisut
1300	Kannada
1305	Kashmiri
1311	Kirghiz
1326	Lingala
1332	Lithuanian
1345	Malagasy
1349	Macedonian
1352	Mongolian
1356	Marathi
1358	Malese; Maltese
1365	Nauru
1376	Dutch
1393	Occitan
1408	Oriya
1428	Polish
1436	Portuguese
1481	Rhaeto-Romance
1483	Romanian
1491	Kinyarwanda
1498	Sindhi
1502	Serbo-Croatian
1505	Slovak
1507	Samoa
1509	Somali
1512	Serbian

Code Language	
1513	Siswati; Swati
1514	Sesotho; Sotho southern
1515	Sundanese
1516	Swedish
1517	Swahili
1521	Tamil
1525	Telugu
1527	Tajik
1528	Thai
1529	Tigrinya
1531	Turkmen
1532	Tagalog
1534	Setswana; Tswana
1535	Tonga; Tonga islands
1538	Turkish
1539	Tsonga
1540	Tatar
1543	Twí
1557	Ukrainian
1564	Urdu
1572	Uzbek
1581	Vietnamese
1587	Volapük
1613	Wolof
1632	Xhosa
1665	Yoruba
1684	Chinese
1697	Zulu
1703	not specified

## Parental control/area code

For details, see “Parental Control Area Code” (page 31).

Code Area	
2044	Argentina
2046	Austria
2070	Brazil
2092	China
2115	Denmark
2174	France
2200	Greece
2248	India
2239	Ireland
2276	Japan
2333	Luxembourg
2362	Mexico
2390	New Zealand
2427	Pakistan
2428	Poland
2489	Russia
2149	Spain
2086	Switzerland
2528	Thailand
2047	Australia
2057	Belgium
2090	Chile
2093	Colombia
2165	Finland
2109	Germany
2219	Hong Kong
2238	Indonesia
2254	Italy
2304	Korea
2363	Malaysia
2376	Netherlands
2379	Norway
2424	Philippines
2436	Portugal
2501	Singapore
2499	Sweden
2543	Taiwan
2184	United Kingdom

---

# Index

## Numerics

3D 16, 22  
3D Output Setting 27  
4K Output 29

## A

AUDIO 15  
Audio Settings 29  
Auto Standby 32

## B

BD/DVD Viewing  
Settings 30  
BD-LIVE 22  
BD-R 38  
BD-RE 38  
Bitstream 35  
Blu-ray Disc 38  
BONUSVIEW 22  
BRAVIA Sync 36

## C

CD 38  
Child Lock 13, 37  
Colour buttons 15  
Connecting  
  AV amplifier  
    (Receiver) 18  
  Network 20  
  TV 17  
Control for HDMI 31,  
36

## D

Deep Colour 29  
Dimmer 31  
Display 16

Dolby Digital 29  
DSD Output Mode 29  
DTS 29  
DVD 38

## E

Easy Setup 21, 33

## G

Gracenote 24  
Gracenote Settings 32

## H

HDMI 28, 29  
HOME 16, 27  
Home menu 27  
Home Network 24, 33

## M

MAC address 32  
Music Settings 31

## N

Network Settings 32  
Network Update 27

## O

OPTIONS 16  
OSD Language 31

## P

Parental Control 31  
Parental Control  
Settings 31  
Play information 23  
Playable discs 38  
POP UP/MENU 15

## R

Region code 39  
Remote 15  
Resetting 33  
Resetting the player 33  
Resume 16, 37

## S

Screen Settings 27  
Setup 27  
Software update 27, 32  
SUBTITLE 15  
System Settings 31

## T

TOP MENU 15  
Troubleshooting 34  
TV Screen Size Setting  
for 3D 28  
TV Type 28

## U

Update 27  
USB 23

## W

WEP 40  
WPA2-PSK (AES) 40  
WPA2-PSK (TKIP) 40  
WPA-PSK (AES) 40  
WPA-PSK (TKIP) 40

The software of this player may be updated in the future. For information about any available updates and the latest Operating Instructions, please visit the following website:

<http://support.sony-europe.com/>



To find out useful hints, tips and information about Sony products and services please visit: [www.sony-europe.com/myproduct/](http://www.sony-europe.com/myproduct/)



**HDMI**



---

<http://www.sony.net/>

4-467-209-12(1)

