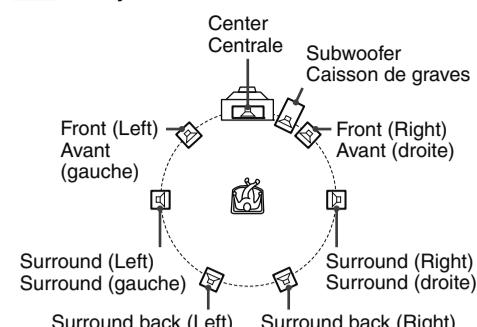
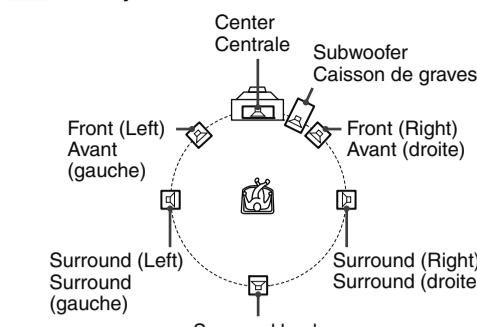
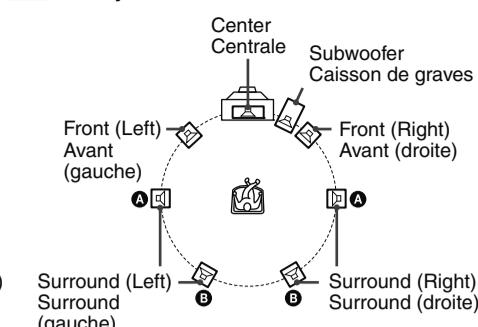


# Система говорители за домашно кино


(BG)

SA-VS350H  
SA-VS150H


© 2009 Sony Corporation Printed in Czech Republic

A-1 7.1 channel speaker system  
Système d'enceintes à 7.1 canauxA-2 6.1 channel speaker system  
Système d'enceintes à 6.1 canauxA-3 5.1 channel speaker system  
Système d'enceintes à 5.1 canaux

B

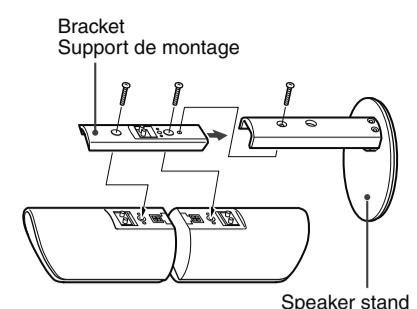


C

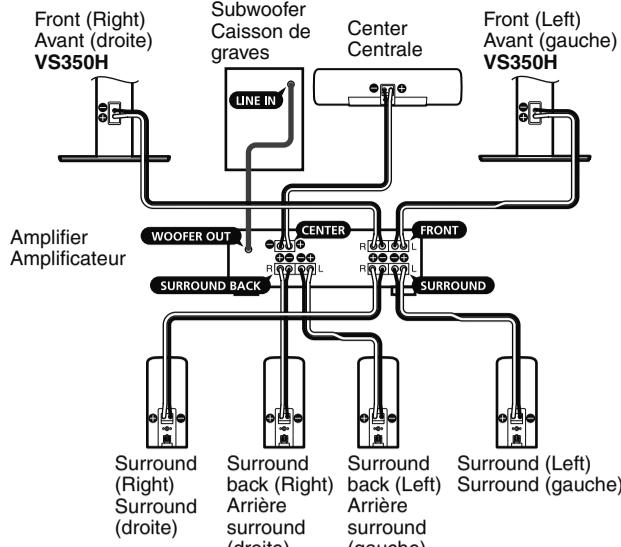

D Rear of the speakers Arrière des enceintes



Rear of the subwoofer Arrière du caisson de graves

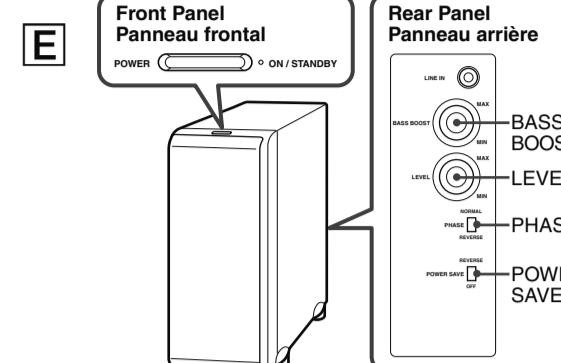**English****WARNING**

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions. The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

**Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.**

The nameplate is located on the rear exterior.

**Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)**

This symbol on the product or its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

**Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives.**

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

**Precautions****On safety**

• Before operating the system, be sure that the operating voltage of the system is identical with that of your local power supply.

• Unplug the system from the wall outlet if it is not to be used for extended period of time. To disconnect the cord, pull the cord by grasping the plug. Never pull the cord itself.

• Should any liquid or solid object fall into the system, unplug the system's power cord and have the system checked by qualified personnel before operating it any further.

• AC power cord must be changed only at the qualified service shop.

**On operation**

• Do not drive the speaker system with a continuous wattage exceeding the maximum input power of the system.

• If the polarity of the speaker connections are not correct, the bass tones will be weak and the position of the various instruments obscure.

• Before connecting, turn off the amplifier to avoid damaging the speaker system.

• The speaker grille cannot be removed. Do not attempt to remove the grille on the speaker system. If you try to remove it, you may damage the speaker.

• The volume level should not be turned up to the point of distortion.

**On placement**

• Do not set the speakers in an inclined position.

• Do not place the speakers in locations that are:

- Extremely hot or cold
- Dusty or dirty
- Subject to vibrations
- Subject to direct sunlight

• Use caution when placing the speaker on a specially treated (waxed, oiled, polished, etc.) floor, as staining or discoloration may result.

**About these Operating Instructions**

The SA-VS350H/SA-VS150H is a 7.1 channel speaker system consisting of two front speakers, four surround/surround back speakers, one center speaker, and one subwoofer. You can also enjoy 5.1 or 6.1 channel surround sound by joining the surround or surround back speakers using the supplied brackets. It supports Sony Digital Cinema Sound, Dolby® Pro Logic, Dolby Digital, and DTS™ etc., and is thus geared towards the enjoyment of movies.

\* "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

\*\* "DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.

**Positioning the speakers (A)**

Each speaker should face the listening position. Better surround effect will result if all speakers are set at the same distance from the listening position.

**Place the speakers as follows:**

**Front speakers:** suitable distance to the left and right of the television.

**Subwoofer:** on either side of the television.

**Center speaker:** on the top-center of the TV set

**Surround speakers:** depends on the configuration of the room

The surround speakers may be placed anywhere between position (A) and position (B).

See illustrations (A)-1~3 for examples of how to position the speakers.

**When you use the system for 5.1 or 6.1 channel surround sound (B)**

[SA-VS350H]

Join the surround/surround back speakers using the supplied brackets, and attach the supplied speaker stands to the joined speakers.

When you use the 6.1 channel speaker system, we recommend that you use the joined speakers as the surround back speaker.

[SA-VS150H]

Join the surround/surround back speakers using the supplied brackets, and attach the supplied speaker stands to the joined speakers.

**Hooking up the system (C)**

Make sure power to all components (included the subwoofer) is turned off before starting the hook-up.

Connect the speaker system to the speaker output terminals of an amplifier.

The picture is one example of how to connect the speakers to an amplifier.

For details regarding the connections of an amplifier, refer to the operating instructions that were provided with your amplifier.

**Connecting the speakers (D)**

- Make sure the plus (+) and the minus (-) terminals on the speakers are matched to the corresponding plus (+) and minus (-) terminals on the amplifier.
- Make sure all connections are firm. Contact between bare speaker wires at the speaker terminals may cause a short circuit.
- Be sure to tighten the screws of the speaker terminals securely as loose screws may become a source of noise.

**Setting the amplifier**

When connecting to an amplifier with internal multi channel decoders (Dolby Digital, DTS, etc.), you should use the setup menu for the amplifier to specify the parameters of your speaker system.

**1. Set the speaker size.**

See the table below for the proper settings. For details on the setting procedure, refer to the operating instructions that were provided with your amplifier.

For	Set to
Front speakers	SIMALL
Center speaker	SIMALL
Surround speakers	SIMALL
Subwoofer	ON (or YES)
Surround back	SIMALL

**2. Set the crossover frequency.**

If you use an amplifier with adjustable crossover frequency, it is recommended to select 180 Hz (or close to this figure) as the crossover frequency for your front, center, and surround speakers.

**Adjusting the subwoofer (E)****Front Panel****POWER**

Turns on the speaker system.

**ON/STANDBY indicator**

Lights up green when the subwoofer is on.

Lights up red when the subwoofer is in power saving mode.

**Rear Panel****LEVEL**

Rotate to adjust the volume.

To enjoy high-quality sound, do not turn the subwoofer volume too high.

**BASS BOOST**

Rotate to adjust the level of BASS BOOST.

**PHASE**

Slide to select NORMAL or REVERSE phase polarity. Switching the phase polarity may provide better bass reproduction in certain listening environments (depending on the type of front speakers, the position of the subwoofer and the adjustment of the BASS BOOST). Select the setting that provides the sound you prefer when listening in your normal listening position.

**POWER SAVE**

Activate the auto power on/off function.

If the subwoofer is on and there is no signal input for a few minutes, the ON/STANDBY indicator changes to red and the subwoofer enters power saving mode.

If a signal is input to the subwoofer, the subwoofer automatically turns on.

**Troubleshooting**

Should you encounter a problem with your speaker system, check the following list and take the indicated measures. If the problem persists, consult your nearest Sony dealer.

**There is no sound from the speaker system.**

- Make sure all the connections have been correctly made.
- Make sure the volume on the amplifier has been turned up properly.
- Make sure the program source selector on the amplifier is set to the proper source.
- Check if headphones are connected. If they are, disconnect them.
- Make sure that the subwoofer isn't in power saving mode. If you turn down the volume level too low, the auto power on/off function may activate, causing the subwoofer to enter power saving mode.

**There is distortion in the subwoofer sound output.**

- Check if any sound-enhancing functions have been activated on the amplifier. If they have, turn them off.
- If the sound distorts when you turn on the bass reinforcement from your amplifier (such as DBFB, GROOVE, the graphic equalizer, etc.), turn down the bass reinforcement and adjust the level.

**There is hum or noise in the speaker output.**

- Make sure all the connections have been correctly made.
- Make sure none of the audio components are positioned too close to the TV set.
- If the volume level of the subwoofer is turned up to maximum, extraneous noise may be output.

**The sound has suddenly stopped.**

- Make sure all the connections have been correctly made. Contact between bare speaker wires at the speaker terminals may cause a short circuit.

**Bass sounds are produced too heavily.**

- Some material is recorded with strong emphasis on bass sounds, which may be excessive in some cases. If this happens, rotate BASS BOOST towards minimum.

**Howling occurs.**

- Reposition the speakers or turn down the volume on the amplifier.

**Specifications****SS-FVS350 (front speakers for SA-VS350H)**

Speaker system 2 way

Speaker units Woofer: 60 x 100 mm, cone type

Tweeter: 25 mm, balanced dome type

Bass reflex 8 ohms

Enclosure type

Rated impedance

Power handling capacity

Maximum input power:

Sensitivity level

Frequency range

Dimensions (w/h/d)

Mass


150 W  
81 dB (1 W, 1 m)  
120 Hz - 50,000 Hz  
Approx. 82 x 1,060 x 100 mm, including front grille, (Diameter of base: 250 mm)  
Approx. 5.0 kg

SS-CNV350 (center speaker)


Speaker system 2 way

Speaker units Woofer: 57 mm


## A-1 Sistema de altavoces de 7.1 canales 7.1-канална система говорители

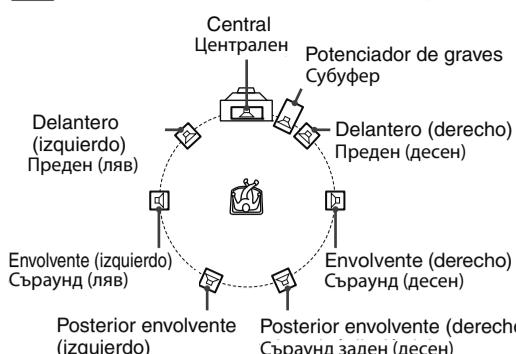


## A-2 Sistema de altavoces de 6.1 canales 6.1-канална система говорители

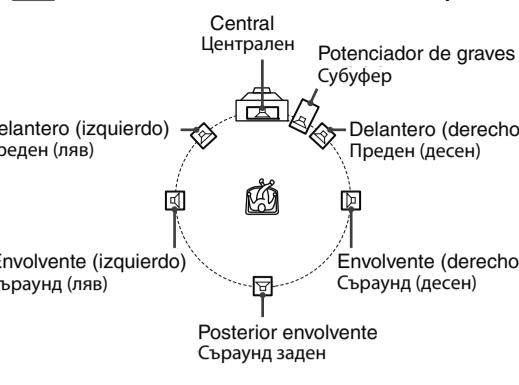


## A-3 Sistema de altavoces de 5.1 canales 5.1-канална система говорители

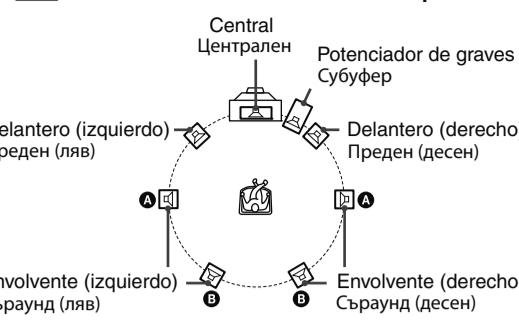

## B

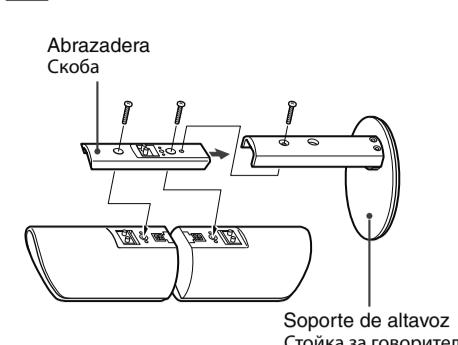

## C

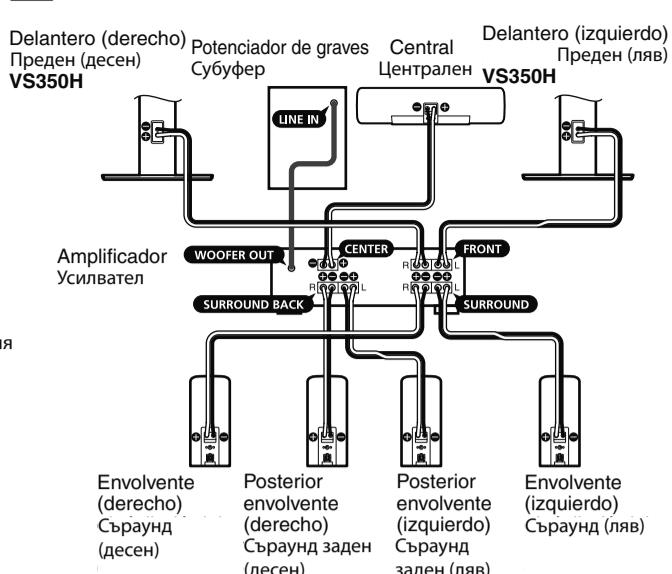

Español

### ADVERTENCIA

Para reducir el riesgo de incendio, no cubra las aberturas de ventilación del aparato con periódicos, manteles, cortinas, etc., ni coloque fuentes de llama viva como, por ejemplo, velas encendidas, sobre el aparato.

Para reducir el riesgo de incendio o electrocución, no moje el aparato, no lo exponga a salpicaduras ni coloque sobre el aparato objetos que contengan líquidos como, por ejemplo, un jarro.

Para evitar lesiones, este aparato debe instalarse firmemente en el suelo o en la pared de acuerdo con las instrucciones de instalación.

Aunque apague la unidad, no se desconectará a la fuente de alimentación mientras permanezca conectada a la toma de ca. Conecte la unidad a una toma de pared fácilmente accesible, puesto que el enchufe principal se utiliza para desenchufar la unidad de la fuente de alimentación. Si detecta cualquier anomalía, extraiga inmediatamente el enchufe de la toma de alimentación de ca.

No instale el aparato en un espacio cerrado, como una estantería para libros o un armario empotrado.

La placa de características se encuentra en la parte posterior exterior.



**Tratamiento de los equipos eléctricos y electrónicos al final de su vida útil (aplicable en la Unión Europea y en países europeos con sistemas de recogida selectiva de residuos)**

Este símbolo en el equipo o el embalaje indica que el presente producto no puede ser tratado como residuos domésticos normales, sino que debe entregarse en el correspondiente punto de recogida de equipos eléctricos y electrónicos. Al asegurarse de que este producto se desecha correctamente, Ud. ayuda a prevenir las consecuencias negativas para el medio ambiente y la salud humana que podrían derivarse de la incorrecta manipulación en el momento de deshacerse de este producto. El reciclaje de materiales ayuda a conservar los recursos naturales. Para recibir información detallada sobre el reciclaje de este producto, póngase en contacto con el ayuntamiento, el punto de recogida más cercano o el establecimiento donde ha adquirido el producto.

**Aviso para los clientes: la siguiente información es aplicable únicamente a productos vendidos en países en los cuales rigen las directivas de la UE.**

El fabricante de este producto es Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japón. El representante autorizado para EMC y seguridad en el producto es Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Alemania. Para cualquier asunto relacionado con servicio o garantía por favor dirigirse a la dirección indicada en los documentos de servicio o garantía adjuntados con el producto.

### Precauciones

#### Para su seguridad

• Antes de hacer funcionar el sistema, compruebe que el voltaje de funcionamiento del sistema es igual al que el de la electricidad local.

• Desenchufe el sistema de la toma de corriente si no lo va a utilizar durante mucho tiempo. Para desconectar el cable, tire del enchufe. No tire del cable.

• Si cae algún líquido o un objeto sólido en el sistema, desenchufe el cable eléctrico del sistema y hágalo inspeccionar por un técnico cualificado antes de seguir utilizándolo.

• El cable de ca debe cambiarse sólo en una tienda de servicio cualificado.

#### Para el funcionamiento

• No accione el sistema de altavoz con un vataje continuo que supere la potencia máxima de entrada del sistema.

• Si la polaridad de las conexiones del altavoz no es la correcta, los graves se escucharán débiles y la posición de los distintos instrumentos no podrá distinguir bien.

• Antes de realizar una conexión, desconecte el amplificador para no dañar el sistema de altavoces.

• No se puede desmontar la pantalla del altavoz. No trate de desmontar la pantalla del sistema de altavoces. Si lo hace, puede dañar el altavoz.

• El nivel de volumen no debe aumentarse hasta el punto de distorsión del sonido.

#### Ubicación

• No coloque los altavoces en una posición inclinada.

• No coloque los altavoces en lugares:

— Muy calientes o fríos

— Con polvo o suciedad

— Muy húmedos

— Expostos a vibraciones

— Expostos a los rayos directos del sol

Tenga cuidado si coloca el altavoz en sueños tratados de manera especial (encerados, barnizados con aceites, pulidos, etc.), ya que es posible que aparezcan manchas o se descoloran.

#### Para la limpieza

Limpie las cajas de los altavoces con un paño suave ligeramente empapado con una solución detergente neutra o agua. No utilice estropajos de metal, polvo abrasivo o disolventes tales como alcohol o bencina.

### Acerca de este manual de instrucciones

El SA-VS350H/SA-VS150H es un sistema de altavoces de 7.1 canales que se compone de dos altavoces frontales, cuatro altavoces envolventes o envolventes posteriores, un altavoz central y un altavoz potenciador de graves. También puede disfrutar del sonido envolvente de 5.1 ó 6.1 canales al unir los altavoces envolventes o envolventes posteriores con las abrazaderas suministradas. Es compatible con Sony Digital Cinema Sound, Dolby® Pro Logic, Dolby Digital y DTS™\*, etc., y por tanto está orientado al disfrute de las películas.

\* "Dolby" y el símbolo de la doble D son marcas comerciales registradas de Dolby Laboratories.

\*\* "DTS" y "DTS Digital Surround" son marcas comerciales registradas de Digital Theater Systems, Inc.

### Ubicación de los altavoces (A)

Todos los altavoces deben estar orientados hacia la posición desde la que se escuchan. Se obtendrá un mejor efecto envolvente si todos los altavoces se colocan a la misma distancia de la posición desde la que se escuchan.

#### Coloque los altavoces del modo indicado a continuación:

**Altavoces delanteros:** a una distancia apropiada a la izquierda y derecha del televisor


**Altavoz potenciador de graves:** a uno de los lados del televisor

**Altavoz central:** en el centro encima del televisor


**Altavoces envolventes:** depende de la distribución de la habitación

Los altavoces envolventes pueden colocarse en cualquier lugar situado entre la posición (A) y la posición (B).


## A-2 Sistema de altavoces de 6.1 canales 6.1-канална система говорители

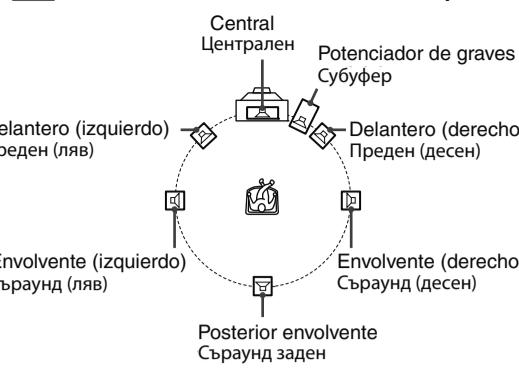


## A-3 Sistema de altavoces de 5.1 canales 5.1-канална система говорители

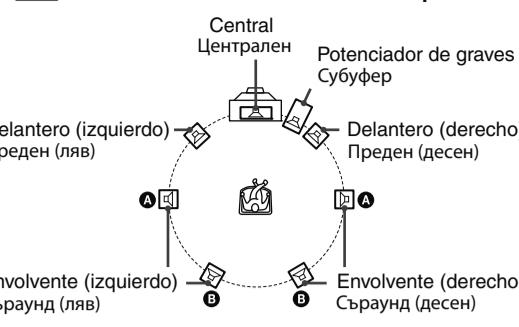

## B

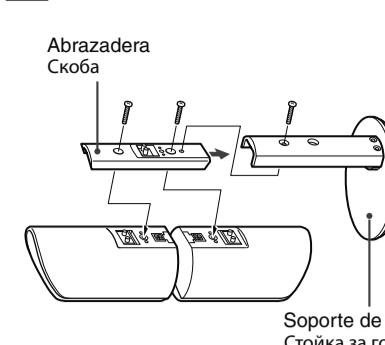

## C

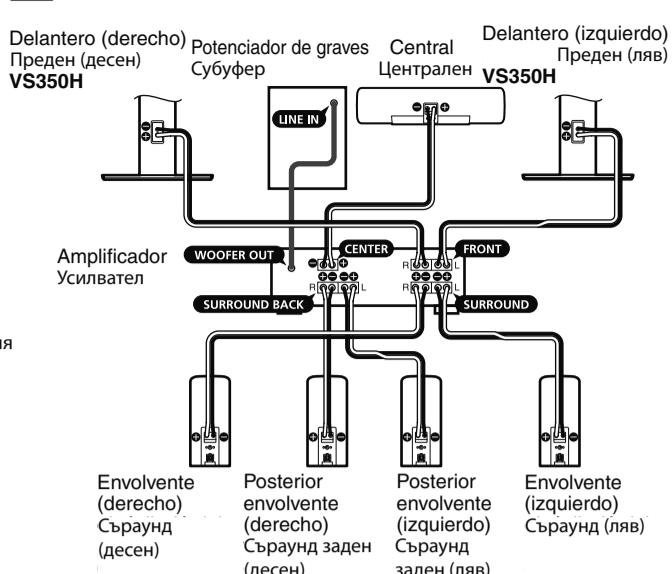

## D

### Parte posterior de los altavoces

Zадна част на говорителите



## E

### Panel frontal

Преден панел



## F

### Panel posterior

Заден панел



## G

### Panel frontal

Преден панел



## H

### Panel posterior

Заден панел



## I

### Panel frontal

Преден панел



## J

### Panel posterior

Заден панел



## K

### Panel frontal

Преден панел



## L

### Panel posterior

Заден панел



## M

### Panel frontal

Преден панел



## N

### Panel posterior

Заден панел



## O

### Panel frontal

Преден панел



## P

### Panel posterior

Заден панел



## Q

### Panel frontal

Преден панел



## R

### Panel posterior

Заден панел



## S

### Panel frontal

Преден панел



## T

### Panel posterior

Заден панел



## U

### Panel frontal

Преден панел

