

Wi-Fi Connection/ One-touch (NFC) Guide

Uputstvo za Wi-Fi povezivanje/povezivanje jednim dodirom (NFC)

* NFC: Near Field Communication

A-1

GB Install the latest software on to your computer.
SRB Instalirajte najnoviji softver na vaš računar.




Windows **Mac** **Wireless Auto Import***
GB *Select [Wireless Auto Import].
SRB *Izaberite [Wireless Auto Import].

<http://www.sony.net/pm/>
<http://www.sony.co.jp/imsoft/Mac/>

A-2

GB Select procedure **a** or **b** to connect access point. For more information, refer to the instruction manual of the access point, or contact the person who set up the access point.

SRB Izaberite postupak **a** ili **b** za povezivanje pristupne tačke. Za više informacija, pogledajte uputstvo za upotrebu pristupne tačke, ili kontaktirajte osobu koja je podesila pristupnu tačku.

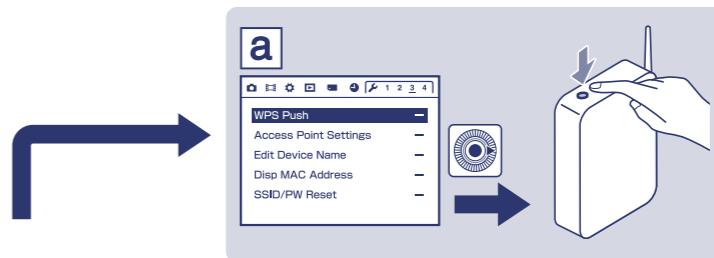


A



GB To send photos/videos from the camera to a computer via Wi-Fi : see A-1

SRB Za slanje fotografija/video zapisa sa fotoaparata na računar preko Wi-Fi mreže: pogledati A-1

B

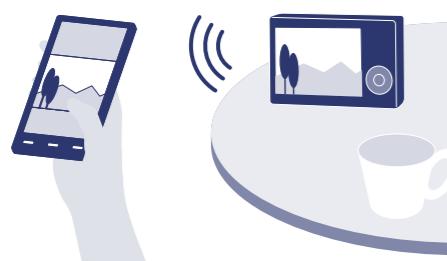


GB To send photos/videos from the camera to a smartphone or tablet : see B-1

SRB Za slanje fotografija/video zapisa sa fotoaparata na pametni telefon ili tablet uređaj: pogledati B-1

A-3

GB Start sending images from the camera to the computer. Previously sent images are not re-sent.

SRB Započnite sa slanjem slika sa fotoaparata na računar. Ranije poslate fotografije se neće ponovo poslati.

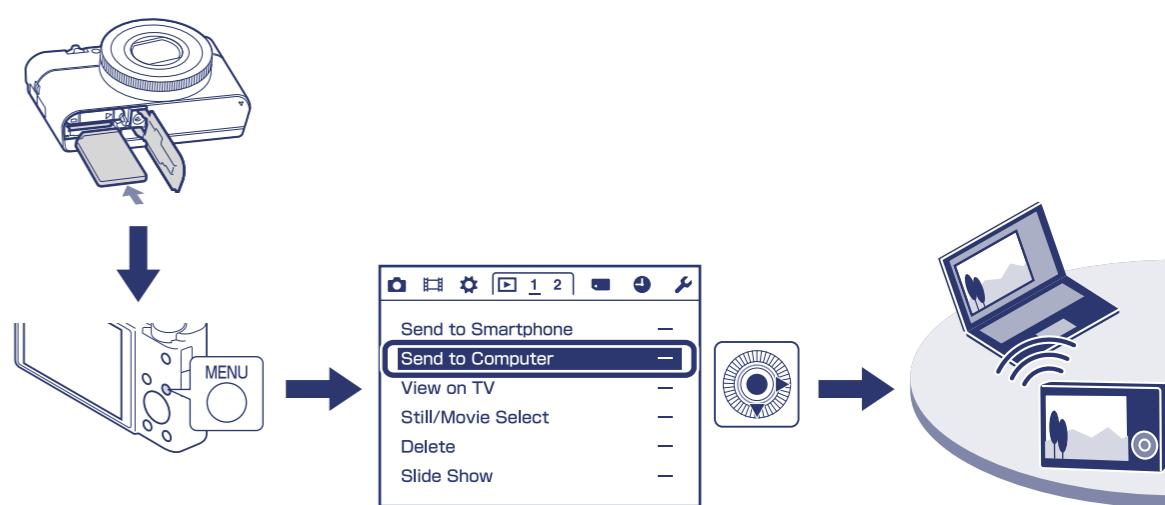

B-1

GB Install the latest version of PlayMemories **Mobile** app on your smartphone. See **WEBSITE*** for more information.

SRB Instalirajte najnoviju verziju aplikacije PlayMemories **Mobile** na vaš pametni telefon. Pogledajte veb sajt* za više informacija.

*<http://www.sony.net/pmm/>



*One-touch functions (NFC) are not available
*Funkcije povezivanja jednim dodirom (NFC) nisu dostupne

GB May not be able to access Google play/App Store in some countries/regions.
No guaranteed to work on all Smartphones/Tablet computers.


SRB Pristup servisima Google play/App Store možda neće biti moguć u nekim državama/regijama.
Nije garantovan rad sa svim pametnim telefonima/tablet računarima.


B-2

Android/iOS not supporting NFC / Android/iOS koji ne podržava NFC

GB Select an image on the camera to be sent, then the SSID and password will be displayed. Select the correct SSID on your smartphone, then input the password.

SRB Izaberite fotografiju na fotoaparatu koju želite da pošaljete. Prikazaće se SSID i lozinka. Izaberite tačan SSID na vašem pametnom telefonu, a zatim unesite lozinku.


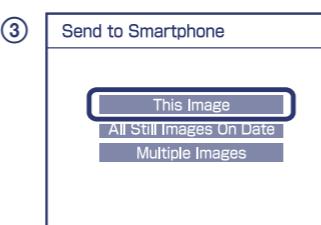
- ① 
- ② 
- ③ 
- ④ 

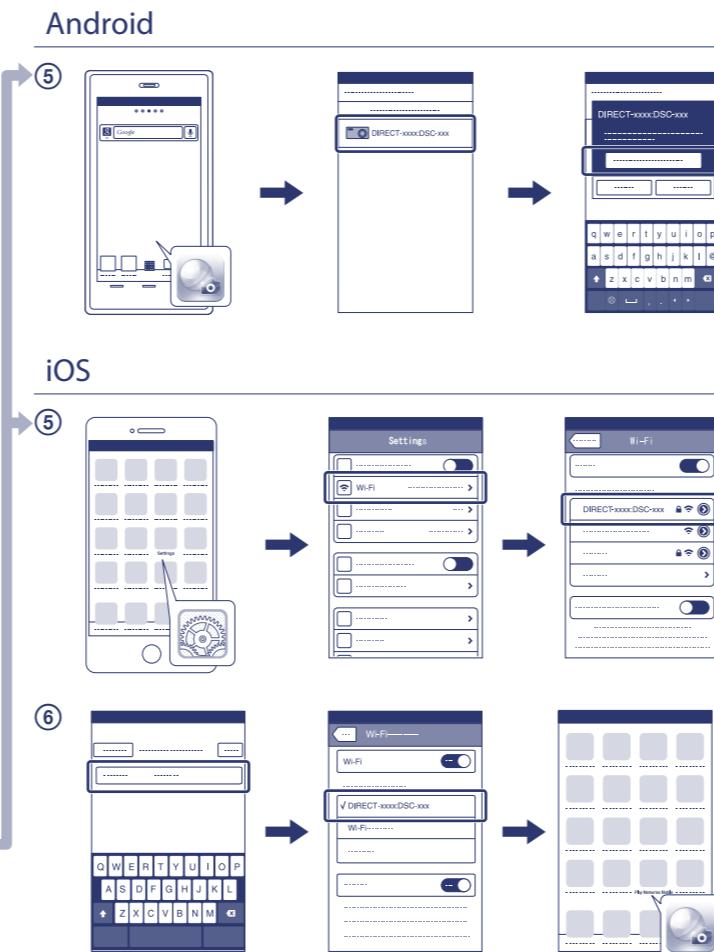

Android supporting NFC (One-touch sharing) / Android koji podržava NFC (deljenje jednim dodirom)

GB Select an image on the camera to be sent, enable the NFC function on the smartphone, then touch **N** (N mark) of the camera to the smartphone.

SRB Izaberite fotografiju na fotoaparatu koju želite da pošaljete, omogućite NFC funkciju na pametnom telefonu, a zatim dodirnite pametnim telefonom **N** (oznaku N) na fotoaparatu.

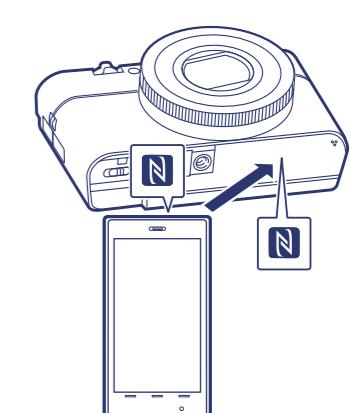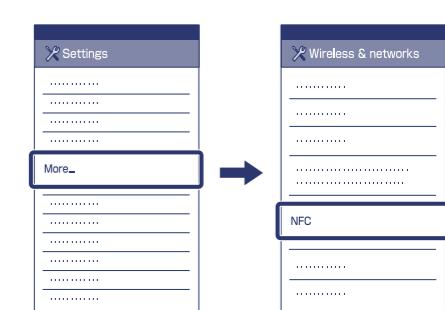

B-3



GB The smartphone can be used as a wireless remote controller for the camera.
SRB Pametni telefon se može koristiti kao bežični daljinski upravljač za fotoaparat.

(More info...)
(Više informacija...)
<http://support.d-imaging.sony.co.jp/wi-fi/dsc/2013-2/>