


Television
Setup Guide


BRAVIA

KD-85XD85xx / FW-85XD85xx



EE	Seadistusjuhend
LV	Uzsākšanas ceļvedis
LT	Nustatymo vadovas
HR	Vodič za postavljanje
SI	Priložnik za pripravo
KZ	Орнату нұсқаулығы
SR	Vodič za podešavanje
HE	מדריך הגדרה

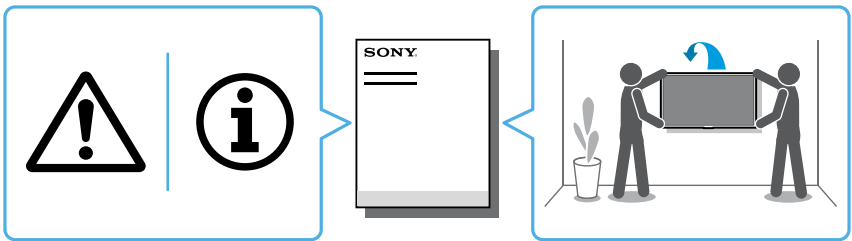


Teatmik / Atsauces ceļvedis / Trumpasis vadovas / Referentni vodič / Referenčni priročnik /
Анықтама нұсқаулығы / Referentni vodič / מודריך עיון

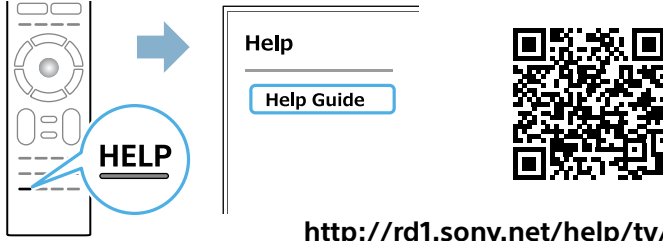

Spikker / Palīdzības ceļvedi / Žinynas / Vodič za pomoć / Vodnik za pomoč /
Көмекші нұсқаулық / Vodič za pomoć / מודריך עזרה

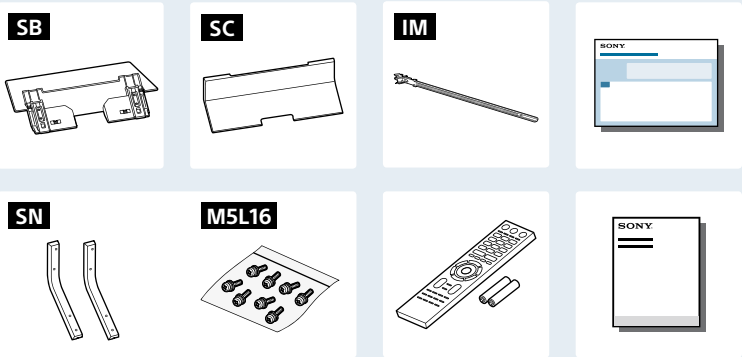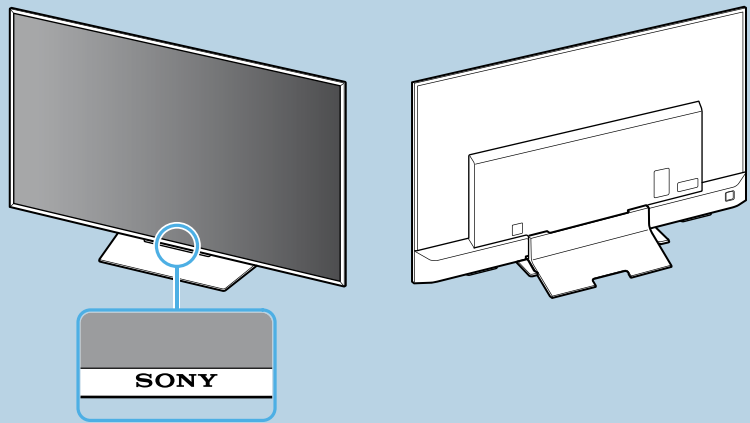



*1

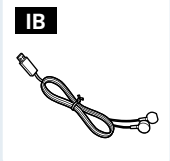

*1


Ainult teatud piirkondades/riikides/telerimudelitel.
Tikai dažos reģionos/valstīs/dažiem televizoru modeļiem.
Tik kai kuriuose regionuose / šalyse / TV modeliuose.
Odnosi se samo na određene regije/zemlje/modele TV-a.
Samo za določena območja/države/modele televizorja.
Tek шектелген аймакта/енде/ТД үлгиси.
Samo za ograničeni region/zemlju/TV model.
באזורים / במדינות / בדגמי טלוויזיה מסוימים בלבד.

1

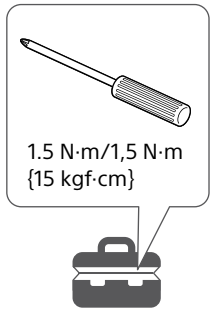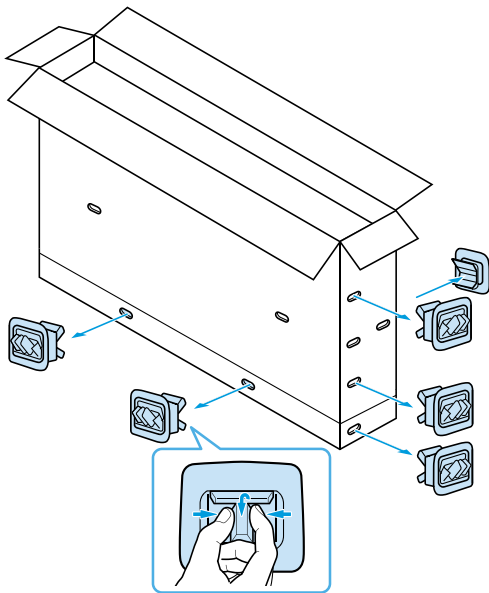


1.5 N-m/1,5 N-m
{15 kgf-cm}


4

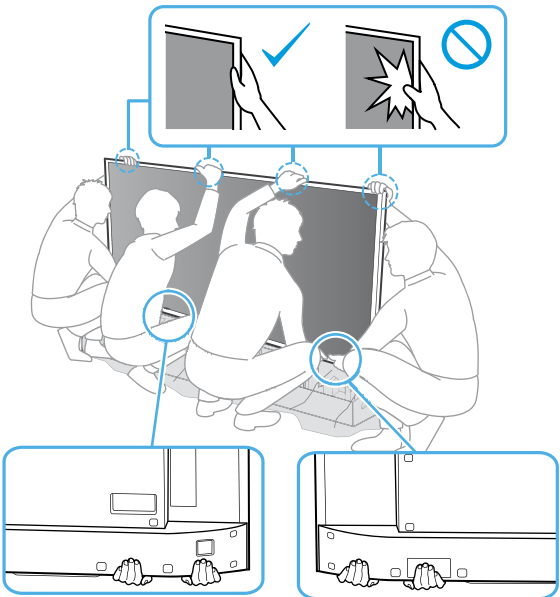


2

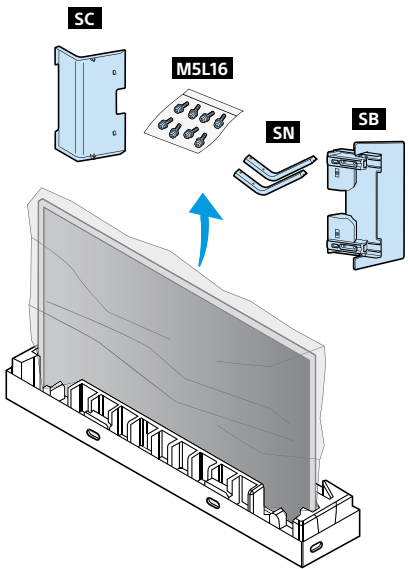

6

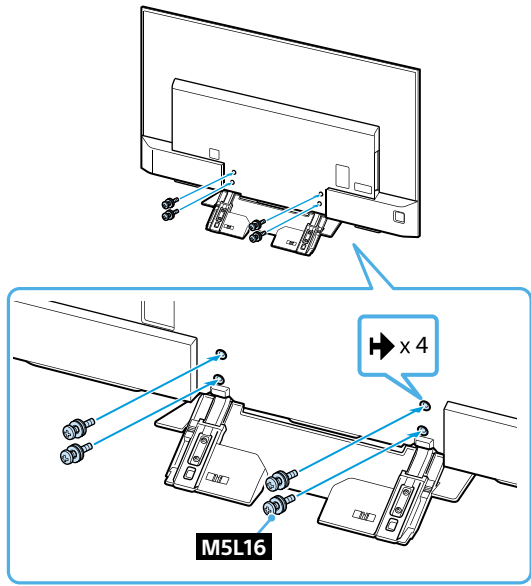

3

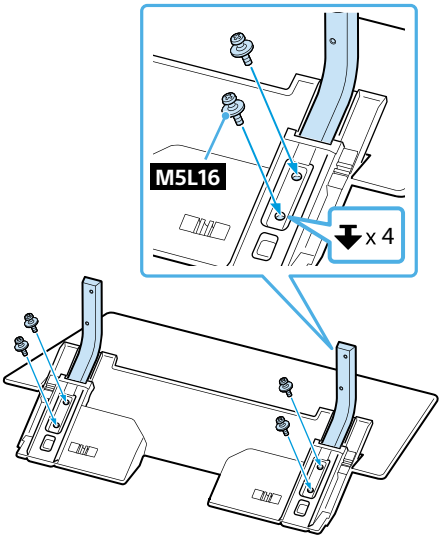

5

